


E - 16 Transmission

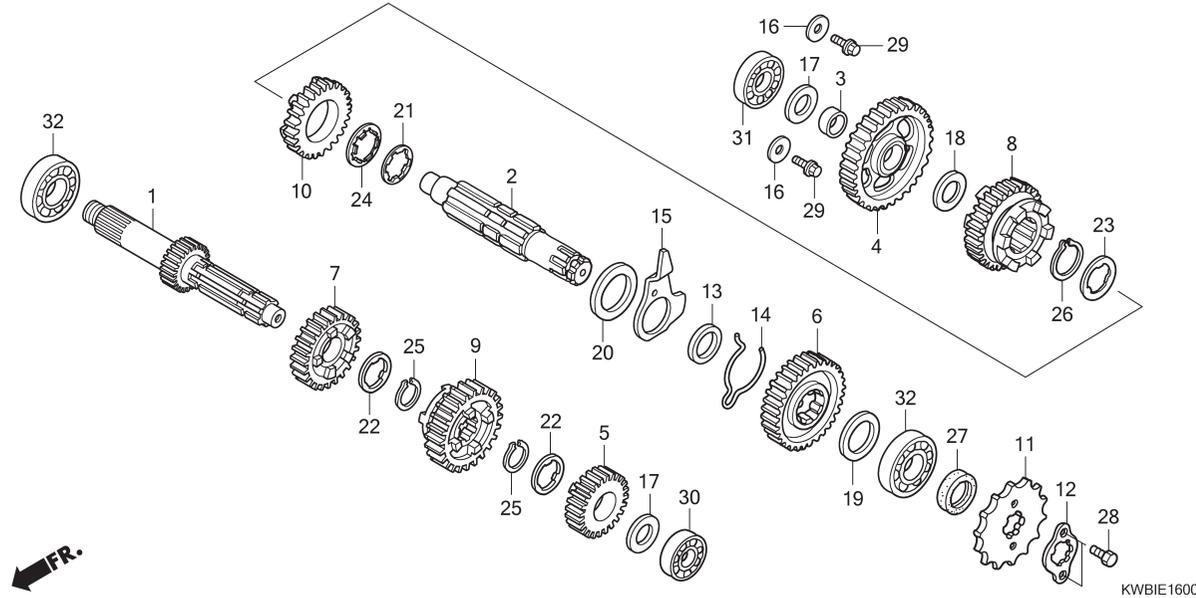

| Service item | F.R.T. | No. | Part Number | Description | QTY | Notes |
|--|--------|-----|----------------|----------------------------|-----|-------|
| 32 BEARING, MAINSHAFT :RIGHT..... .INCLUDES: Engine removal and installation | 3.5 | 21 | 90461-KWB-600 | WASHER, SPLINE, 20MM | 1 | |
| | | 22 | 90461-035-000 | WASHER, SPLINE, 17MM | 2 | |
| BEARING, MAINSHAFT :BOTH..... .INCLUDES: Engine removal and installation | 3.7 | 23 | 90461-459-010 | WASHER, SPLINE, 20MM | 1 | |
| | | 24 | 90465-KWB-600 | WASHER, LOCK, 20MM | 1 | |
| | | 25 | 90601-001-000 | CIRCLIP, EXTERNAL, 17MM | 2 | |
| BEARING, COUNTERSHAFT :LEFT.. .INCLUDES: Engine removal and installation | 2.8 | 26 | 90601-459-000 | CIRCLIP, 20MM | 1 | |
| | | 27 | 91204-KWB-601 | OIL SEAL, 17X29X5 | 1 | |
| | | 28 | 92101-06010-0A | BOLT, HEX., 6X10 | 2 | |
| | | 29 | 95701-06012-00 | BOLT, FLANGE, 6X12 | 2 | |
| BEARING, COUNTERSHAFT :BOTH .INCLUDES: Engine removal and installation | 3.7 | 30 | 96100-60010-00 | BEARING, RADIAL BALL, 6001 | 1 | |
| | | 31 | 96100-62010-00 | BEARING, RADIAL BALL, 6201 | 1 | |
| BEARING, MAINSHAFT AND COUNTERSHAFT :ALLINCLUDES: Engine removal and installation | 3.9 | 32 | 96100-62030-00 | BEARING, RADIAL BALL, 6203 | 2 | |