


E - 16 Transmission

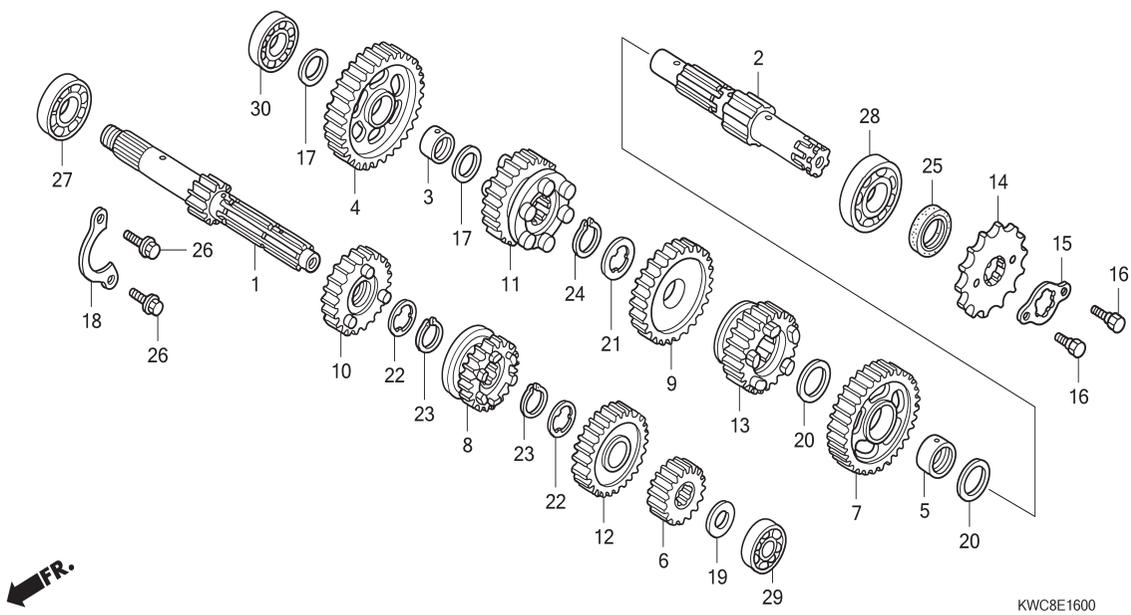

Service item	F.R.T.	No.	Part Number	Description	QTY	Notes
1 (6,8,10,12)		1	23211-KGH-901	MAINSHAFT, TRANSMISSION (12T)	1	
MAINSHAFT, TRANSMISSION.....	4.8	2	23221-KGH-901	COUNTERSHAFT	1	
.INCLUDES: Engine removal and installation		3	23415-HB3-001	BUSH, 15MM	1	
.Replace countershaft add	0.2	4	23421-KGH-901	GEAR, COUNTERSHAFT LOW (37T)	1	
		5	23431-KGH-901	BUSH, 20MM	1	
2 (4,7,9,11,13)		6	23441-KGH-901	GEAR, MAINSHAFT SECOND (17T)	1	
COUNTERSHAFT, TRANSMISSION	4.8	7	23451-KGH-901	GEAR, COUNTERSHAFT SECOND (32T)	1	
.INCLUDES: Engine removal and installation		8	23461-KGH-901	GEAR, MAINSHAFT THIRD (18T)	1	
Replace mainshaft add.....	0.2	9	23471-KGH-901	GEAR, COUNTERSHAFT THIRD (25T)	1	
		10	23481-KGH-901	GEAR, MAINSHAFT FOURTH (21T)	1	
14 SPROCKET, DRIVE	0.3	11	23491-KGH-901	GEAR, COUNTERSHAFT FOURTH (23T)	1	
27 BEARING, MAINSHAFT :RIGHT	4.8	12	23501-KGH-901	GEAR, MAINSHAFT FIFTH (26T)	1	
.INCLUDES: Engine removal and installation		13	23511-KGH-900	GEAR, COUNTERSHAFT FIFTH (24T)	1	
28 BEARING, COUNTERSHAFT :LEFT	5.3	14	23801-KCT-690	SPROCKET, DRIVE (14T)	1	
.INCLUDES: Engine removal and installation		15	23811-KPS-900	PLATE A2, FIXING	1	
29 BEARING, MAINSHAFT :LEFT.....	5.3	16	90084-041-000	BOLT, DRIVE SPROCKET FIXING	2	
BEARING, MAINSHAFT :BOTH.....	5.5	17	90412-187-000	WASHER, THRUST, 15MM	2	
.INCLUDES: Engine removal and installation		18	90441-KW7-931	PLATE, BEARING HOLDER	1	
30 BEARING, COUNTERSHAFT :RIGHT.....	4.8	19	90452-KGH-901	WASHER, SPECIAL, 12MM	1	
BEARING, COUNTERSHAFT :BOTH.....	5.5	20	90454-107-001	WASHER, THRUST, 20MM	2	
BEARING, MAINSHAFT AND						
COUNTERSHAFT :ALL.....	5.7					
.INCLUDES: Engine removal and installation						