

PART NAME INDEX

Part name	Address	Page Ref.	Part name	Address	Page Ref.	Part name	Address	Page Ref.
CABLE COMP., THROTTLE	F4	49	CLIP, TUBE	G1	62	CRANKCASE COMP., R.	D13	1
CABLE, BATTERY EARTH	H3	80	CLIP, VALVE GUIDE	G4	65	CRANKSHAFT COMP.	D14	1
CABLE, STARTER MAGNETIC			CLIP, WIRE	G6	67	CUSHION ASSY., RR.	F16	10
BATTERY			CLIP, WIRE	D2	26	CUSHION, C.D.I. UNIT	G15	1
CABLE, STARTER MOTOR	H3	80	CLUTCH, ONE WAY	G16	77	CUSHION, FUEL STRAINER	H4	1
CALIPER SUB ASSY., L. FR.	F11	56	COCK ASSY., FUEL	D8	32	CUSHION, FUEL TANK FR.	G6	6
CAMSHAFT COMP.	D3	27	COIL COMP., IGNITION	F16	61	CUSHION, TAILLIGHT	F16	7
CAM, RR. BRAKE	F14	59	COLLAR C	H4	81	CUSHION, VISOR	G2	4
CAP ASSY., NOISE SUPPRESSOR ..	H4	61	COLLAR, 10MM	G16	77	CYLINDER COMP.	F1	46
CAP COMP., FUEL FILLER	F16	81	COLLAR, 18.5MM	D1	25	CYLINDER SET, MASTER	D5	13
CAP, 14MM	D9	33	COLLAR, 6.5X4	E3	43	CYLINDER SUB ASSY., FR. BRAKE	F5	50
CAP, 32MM	D9	33	COLLAR, BALANCER DRIVEN GEAR ..	G11	72	C.D.I. UNIT COMP., DIGITAL	H4	2
CAP, BLEEDER	F11	56	COLLAR, CHAIN GUARD	D14	38	[D]		
CAP, CABLE SEALING	E4	44	COLLAR, CHAIN ROLLER	G13	74	DIAPHRAGM	F5	50
CAP, CHANGE SWITCH CONTACT ..	E2	42	COLLAR, CHAMBER RR.	G8	69	DISK, CLUTCH FRICTION	D7	31
CAP, MASTER CYLINDER	F5	50	COLLAR, CUSHION CONNECTING ROD	G15	76	DISK, L. FR. BRAKE	F12	16
CAP, NUMBER BRACKET	G16	77	COLLAR, ENGINE MOUNT	H5	82	DOMEL PIN, 10X12	D2	26
CAP, NUMBER PLATE BASE COMP. ..	G16	77	COLLAR, FENDER COVER	H2	79	DOMEL PIN, 6X10	D2	26
CAP, OIL FILTER ROTOR	D12	36	COLLAR, FENDER MOUNTING	F8	53	DOMEL PIN, 8X14	D1	25
CAP, RR. FORK END	G13	74	COLLAR, FR. AXLE DISTANCE	F12	57	DRIVER 1, PLUS SCREW	H7	84
CAP, SPECIAL	F1	46	COLLAR, FR. FENDER SETTING	H3	80	DRIVER 3, MINUS SCREW	H7	84
CAP, STEERING STEM	F6	51	COLLAR, FR. WHEEL	F12	57	DRUM, GEARSHIFT	E2	42
CAP, SWINGARM DUST SEAL	G13	74	COLLAR, FUEL TANK MOUNTING	F16	61	DUCT, INLET	G4	65
CAP, TOOL BOX	H7	84	COLLAR, KICK SPRING	E3	43	DUST SEAL, 17X20X2.5	G10	71
CARBURETOR ASSY.	E4	44	COLLAR, LOCK SETTING	G6	67	DUST SEAL, 17X24X4	G15	76
CARRIER COMP., RR.	G16	77	COLLAR, MUFFLER MOUNTING	G8	69	DUST SEAL, 40X50X5	F13	58
CASE ASSY., UNDER	F2	47	COLLAR, RR. AXLE DISTANCE	F15	60	DUST SEAL, BRAKE CAM	F14	59
CASE ASSY., UPPER	F2	47	COLLAR, RR. FENDER	G16	77	DUST SEAL, STEERING HEAD	F7	52
CASE SUB ASSY., AIR CLEANER ..	G4	65	COLLAR, RR. WHEEL	F15	60	ELEMENT COMP., AIR CLEANER	G4	65
CASE, DRIVE CHAIN	G13	74	COLLAR, SEAT SETTING	G2	63	EMBLEM, PRODUCT	F6	51
CASE, L. BOTTOM	F9	54	COLLAR, SIDE MOUNTING	F16	61	[E]		
CASE, R. BOTTOM	F9	54	COLLAR, STAND RUBBER SETTING ..	G12	73	[F]		
CASE, WATER INLET	G6	67	COLLAR, STARTER REDUCTION	D8	32	FENDER, FR.	F8	53
CENTER, CLUTCH	D7	31	COLLAR, SWINGARM PIVOT CENTER	G13	74	FILTER COMP., AIR	G6	67
CHAIN, CAM	D4	28	COLLAR, TAILLIGHT MOUNTING	H2	79	FLAP, TIRE	F12	57
CHAIN, DRIVE	G13	74	COLLAR, UPPER ENGINE HANGER	H5	82	FLOAT SET	F15	60
CHAMBER SET, FLOAT	E4	44	COTTER, VALVE MOUNT	D3	27	FLYWHEEL COMP.	E4	44
CIRCLIP	F5	50	COUNTERSHAFT COMP.	D16	40	FORK ASSY., L. FR.	D10	34
CIRCLIP, 20MM	D16	40	COVER COMP., CYLINDER HEAD	D1	25	FORK ASSY., R. FR.	F9	54
CIRCLIP, EXTERNAL, 14MM	E2	42	COVER COMP., LICENSE	H2	79	FORK, CENTER GEARSHIFT	E2	42
CIRCLIP, EXTERNAL, 16MM	E3	43	COVER COMP., L. RR.	D9	33	FORK, GEARSHIFT	E2	42
CIRCLIP, EXTERNAL, 17MM	E3	43	COVER COMP., R. CRANKCASE	D6	30	FUSE, BLADE	H3	80
CIRCLIP, EXTERNAL, 28	D15	39	COVER SET, L. SIDE	G3	64			
CLAMP	F2	47	COVER SET, R. SIDE	G3	64			
CLAMP A, BRAKE HOSE	F9	54	COVER SUB ASSY., AIR CLEANER ..	G4	65			
CLAMP, A.C. GENERATOR CORD ..	D10	34	COVER, BRAKE HOSE CLAMP	F5	50			
CLAMP, SPEEDOMETER CABLE	F9	54	COVER, L. CRANKCASE	D9	33			
CLAMP, TUBE	G5	66	COVER, L. FR. SIDE	G3	64			
	G6	67	COVER, L. HANDLE LEVER	F4	49			
CLIP C9, TUBE	F16	61	COVER, RR. BRAKE ARM	F14	59			
CLIP, BREATHER TUBE	G4	65	COVER, R. FR. SIDE	G3	64			
	G6	67	COVER, SOCKET	F1	46			
	G6	67	COVER, SOCKET	F1	46			
CLIP, HOSE	G6	67	COWL SET, RR.	G16	77			
CLIP, KICK STARTER ARM	G10	71	CRANKCASE COMP., L.	D13	37			
CLIP, OIL DRAIN TUBE	G6	67						
CLIP, PISTON PIN, 14MM	D14	38						
CLIP, TUBE	E4	44						
	E5	45						

