

1	STAY, SEAT SETTING	77124-215-000
2	SEAT *NH1L*	77200-215-010A
2	SEAT *B2L*	77200-215-010B
2	SEAT *R2L*	77200-215-010E
3	PLATE, FR.	89421-200-000
4	PLATE, RR.	89422-200-000
5	KEY ASSY., PUMP	89423-253-000
6	BOLT, SEAT SETTING	90101-272-000
7	BOLT, HEX. (8X16)	92000-08016
7	BOLT, HEX. (8X16)	92000-08016-0A
7	BOLT, HEX. (8X16)	92101-08016-0A
7	BOLT, HEX. (8X16)	92200-08016-0A
8	NUT, HEX. (8MM)	94001-08000
8	NUT, HEX. (8MM)	94030-08000
8	NUT, HEX. (8MM)	94030-08200
9	WASHER, PLAIN (8MM)	94101-08000
10	WASHER, SPRING (8MM)	94111-08000

