

2002-RS250R PARTS LIST

CONTENTS

INSTRUCTIONS FOR USE OF PARTS LIST 2- 2

ENGINE GROUP

E- 1	Front cylinder / Cylinder head	2- 3
E- 2	Rear cylinder / Cylinder head	2- 4
E- 3	L. Crankcase cover / Clutch	2- 5
E- 4	Exhaust valve pulley / Rear adjuster rod	2- 6
E- 5	A.C. generator	2- 7
E- 6	Water pump	2- 8
E- 7	Crankcase	2- 9
E- 8	Crankshaft / Piston	2-11
E- 9	Transmission	2-12
E-10	Gearshift fork / Gearshift drum	2-14
E-11	Carburetor	2-15

FRAME GROUP

F- 1	Servo motor / Meter / Meter panel	2-18
F- 2	Cable / Switch / Handlebar	2-19
F- 3	Front brake caliper / Front brake master cylinder	2-20
F- 4	Steering stem / Steering damper / Front fender	2-21
F- 5	Front fork	2-22
F- 6	Front wheel	2-23
F- 7	Rear brake master cylinder	2-24
F- 8	Rear brake caliper	2-25
F- 9	Rear wheel	2-26
F-10	Fuel tank	2-27
F-11	Carburetor box	2-28
F-12	Expansion chamber	2-29
F-13	Gearshift pedal / Footpeg (Change pedal / Step arm)	2-30
F-14	Rear swingarm	2-31
F-15	Shock absorber (Rear cushion)	2-32
F-16	Ignition coil / Wire harness	2-33
F-17	Engine control unit / Frame body / Stand	2-34
F-18	Radiator	2-35
F-19	Cowl	2-36

INDEX 2-37