
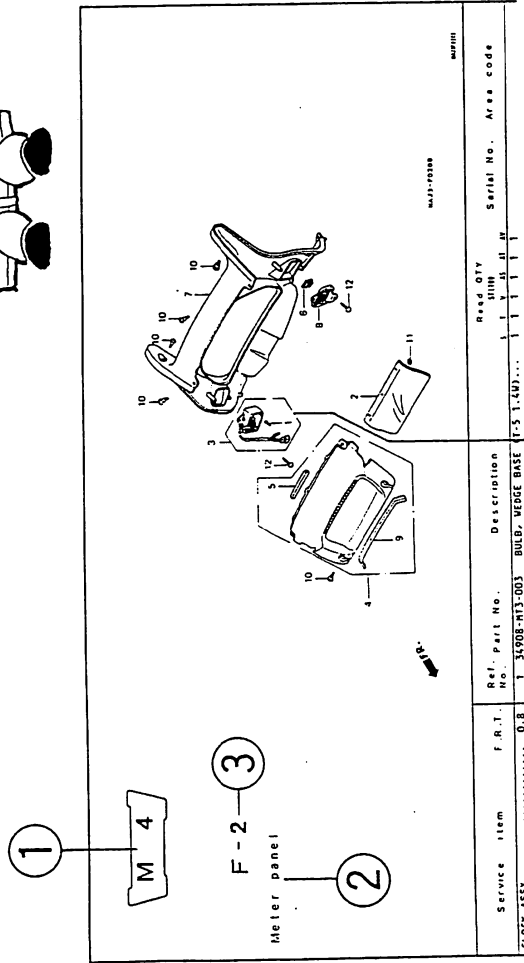


Part catalogue structure

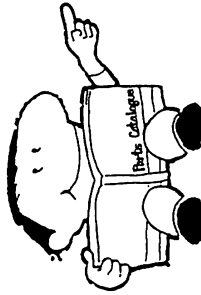

Service Item	F.R.T.	Ref. Part No.	Description	Reqd QTY	Serial No.	Area code
CLOCK ASSY.....	0.8	34908-M13-003	BULB, WEDGE BASE (T-5 1.4V).....	1		
SCREEN COMP., INNER.....	0.2	37104-M13-000	PROTECTOR, METER.....	1		
PANEL, METER.....	0.7	37460-M13-003	CLOCK ASSY.....	1		
		64111-M13-000A	SCREEN COMP., INNER.....	1		
		64111-M13-000A	*H1285*	1		
		64121-M13-000	*H1285*	1		
		64121-M13-000	MAJ, SCREEN GARNISH.....	3		
		64121-M13-000	MAJ, SCREEN GARNISH.....	3		
		64121-M13-000	(CAUTION DURING INSTALLATION)	3		
		64236-M09-770	GRONNET, HEADLIGHT ADJUSTING.....	1		
		64240-M13-000A	PANEL, METER.....	1		
		H1285	*H1285*	1		
		64241-M13-000	PANEL, HEADLIGHT ADJUST KNOB	1		
		64601-M13-300	RUBBER, SEAL.....	6		
		90109-584-000	SCREW, TRUSS, 5X16.....	6		
						G

- ① Address number
 - Address No. is provided (in place of the page No.) to help you refer to the part with the part No. or part name.
- ② Block title
- ③ Block number
- ④ Service item/Flat rate time
- ⑤ Reference number
 - Title number marked with the parenthesis or parentheses indicates that it continues from the previous page.
- ⑥ Part number
- ⑦ HONDA color code
- ⑧ Description
- ⑨ Assemblies
 - Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained.)
- ⑩ Color description
- ⑪ Note
 - Notes are shown with the parentheses in the part name column.
- ⑫ Required quantity
 - Req'd. QTY shown in the parenthesis or parentheses indicates the optional part.
 - Req'd. QTY marked with "N" Indicates the optional part that should be selected as needed.
 - Req'd. QTY indicates the number of the part used in the block.
- ⑬ Serial number
- ⑭ Area code
 - When the area code column is blank, it indicates that the part is applicable to all types.