

CONTENTS OF '21 COTA 301RR PARTS LIST

INSTRUCTIONS FOR USE OF PARTS LIST 5

ENGINE GROUP

E-01 Cylinder head6
E-02 Camshaft / Valve.....7
E-03 Camchain / Tensioner8
E-04 Cylinder.....9
E-05 RH. Crankcase cover10
E-06 Clutch11
E-07 Oil pump12
E-08 Water pump13
E-09 LH. Crankcase cover14
E-10 Generator15
E-11 Crankcase.....16
E-11 Crankcase.....17
E-12 Crankshaft / Piston18
E-13 Transmission19
E-14 Gearshift drum20
E-15 Kick starter spindle21
E-16 Throttle body / Injector22

FRAME GROUP

F-01 Cable / Switch23
F-02 Front brake master cylinder24
F-03 Clutch master cylinder25
F-04 (2ED) Steering handle pipe / Top bridge / Head light26
F-04 (4ED) Steering handle pipe / Top bridge.....28
F-05 Steering stem29
F-06 Front fender30
F-07 Front fork (Tech).....31
F-08 Front brake caliper.....32
F-09 Front wheel33
F-10 Rear brake caliper34
F-11 Rear brake master cylinder.....35
F-12 Rear wheel.....36
F-13 (2ED) Fuel tank / Fuel pump37
F-13 (4ED) Fuel tank / Fuel pump38
F-14 Rear fender39
F-15 Air cleaner.....40
F-16 Exhaust muffler.....41
F-17 Pedal / Kick starter arm42
F-18 Stand / Step.....43
F-19 Swingarm44
F-20 Rear cushion (Showa).....46
F-21 Wire harness47
F-22 Radiator49
F-23 Frame body50
F-24 Emblem / Stripe51
F-25 Optional parts (Replica)52
F-26 Optional parts53