

## General Information

Frame	Location	Material	Remarks
Steering stem bearing Wheel bearing dust seal lips Wheel axle outer surface Rear wheel and driven flange mating surface Handlebar (throttle grip sliding surface) Throttle cable ends Brake pedal pivot shaft Side stand pivot bolt outer surface Dust seal lips Speedometer gear Seat locking tab Swingarm pivot bearings Swingarm pivot bearing dust seal lips Swingarm pivot nut threads		Multi-purpose grease	Apply thin coat of grease
Side reflector threads Caliper bracket pin bolt threads Caliper pin bolt threads		Locking agent	
Fork cap O-ring Fork oil seal lips		Fork fluid	
Handlebar grip		Honda Bond A or equivalent	
Brake caliper seals Caliper-piston sliding surface Master cylinder piston caps Master cylinder-piston sliding surface		DOT 4 Brake fluid	
Driven sprocket nuts threads Steering head bearing adjustment nut		Engine oil	
Brake caliper pin bolts sliding surface Front brake master cylinder piston: lever contact area and boot inside Rear brake master cylinder piston: push rod contact area and boot inside		Silicone grease	