

Remove the side bumper protector.
 Remove the protector cover (page 3-5).
 Remove the lower fairing mounting socket bolts and flange bolts.


Remove the retaining clip.
 Disconnect the lower hooks then separate and remove the lower fairings.

Installation

Installation is in the reverse order of removal.

NOTE


- Be careful not to damage the hooks.

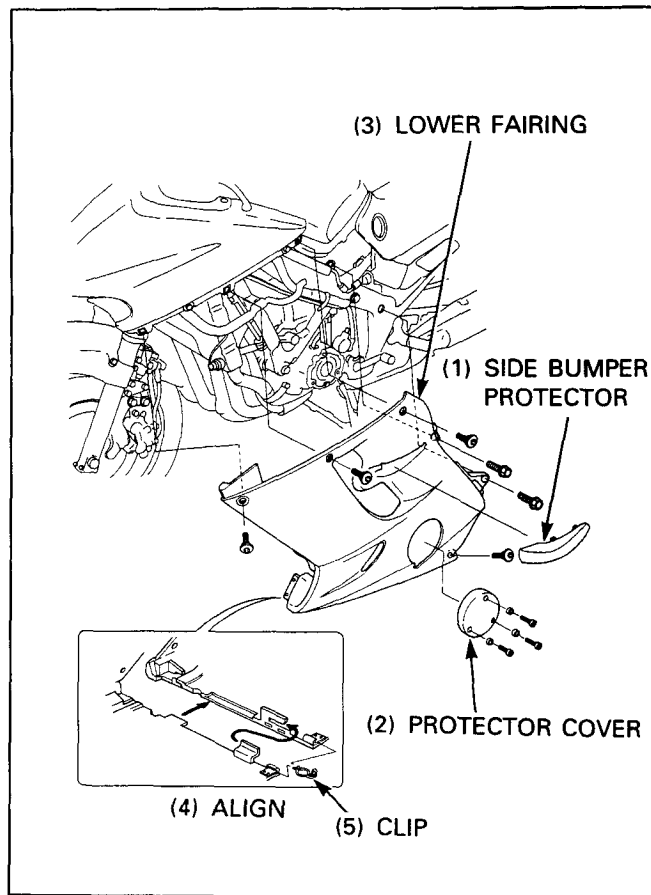

Upper Fairing

Removal

Remove the lower fairing.
 Remove the screws, plastic washers, rubber washer and windscreen.
 Remove the windscreen setting nut.

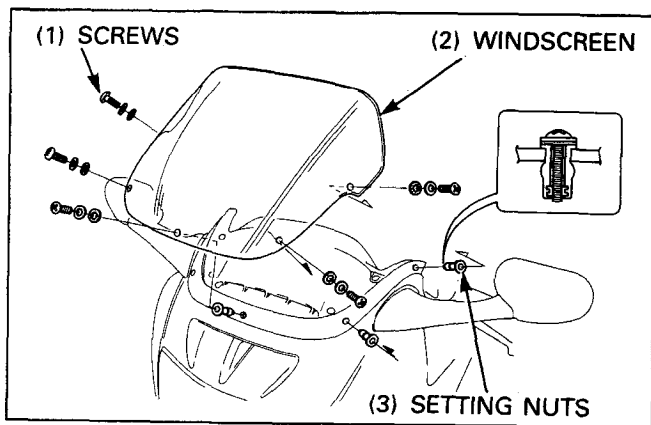

Remove the rearview mirror boot.

Remove the following:

- Bolts
- Rearview mirror
- Setting plate
- Setting rubber

NOTE

- At installation, install the setting rubber with its mark facing outward.
- At installation, install the setting plate with its arrow facing out and forward as shown.

