

Requisite Service

- Fuel tank removal/installation (page 2-9)

Procedure		Q'ty	Remarks
	Removal Order		Installation is in the reverse order of removal.
(1)	Ignition coil assembly	1	Removal/installation (page 15-9)
(2)	Radiator fan motor connector	1	
(3)	Pulse secondary air injection control valve assembly	1	SW, AR type only.
(4)	Breather tube	1	Disconnect the breather tube from the cylinder head side.
(5)	Air vent tube	1	
(6)	Insulator	1	
(7)	Cylinder head cover bolt	8	At installation, tighten the "▲" mark side bolts first, then other side bolts.
(8)	Washer	8	At installation, install them with the "UP" marks facing up.
(9)	Cylinder head cover	1	At installation, install the cover with the "F ↑" mark facing forward.
(10)	Gasket	1	
(11)	Breather case cover bolt	5	
(12)	Breather case cover	1	
(13)	Gasket	1	