## NOTE

- · Apply molybdenum oil to the shifter gear grooves.
- Always install the thrust washers and snap rings with the chamfered (rolled) edge facing away from the thrust load.
- After installing a snap ring, slightly open the ring and rotate it in its groove to be sure it is fully seated.
- Do not use worn snap rings which could easily spin in the groove. They may be too loose to properly seat in the groove.
- · Align the gap in the snap ring with the groove of spline.

## Requisite Service

• Transmission removal/installation (page 10-8)

Procedure		Q'ty	Remarks
	Mainshaft Disassembly Order		Assembly is in the reverse order of disassembly.
(1)	Needle bearing outer case	1	·
(2)	Needle bearing	1	
(3)	Washer	1	
(4)	M2 gear (15T)	1	
(5)	Lock plate	1	
(6)	Lock washer	1	At installation, align the tabs on the plate with cut out of the washer.
(7)	M6 gear (22T)	1	·
(8)	M6 gear spline bushing	1	
(9)	Spline washer	1	
(10)	Snap ring	1	
(11)	M3/M4 gear (17/19T)	1	
(12)	Snap ring	1	
(13)	Spline washer	1	
(14)	M5 gear (23T)	1	
(15)	M5 gear bushing	1	
(16)	Washer	1	
(17)	Mainshaft bearing	1	At installation, install it with bearing stopper on the outside.
(18)	Mainshaft/M1 gear	1	