## **Requisite Service**

• Swingarm removal/installation (page 12-9)

Procedure		Oʻty	Remarks
(1)	Removal Order Drive chain adjuster	1	Installation is in the reverse order of removal.  NOTE  Install the adjuster with its "UP" mark facing up and the index mark facing out.
(2)	Drive chain slider	1	
(3)	Right pivot collar	1	
(4)	Left pivot collar	1	
(5)	Right dust seal, 22 x 35 x 7 mm	1	
(6)	Left dust seal, 22 x 31 x 5 mm	1	
(7)	Distance collar	1	
(8)	Snap ring	1	
(9)	Radial bearing (6202)	2 —	Refer to page 12-12 for replacement.
(10)	Needle bearing	1 —	