


## Secondary Master Cylinder Disassembly/Assembly

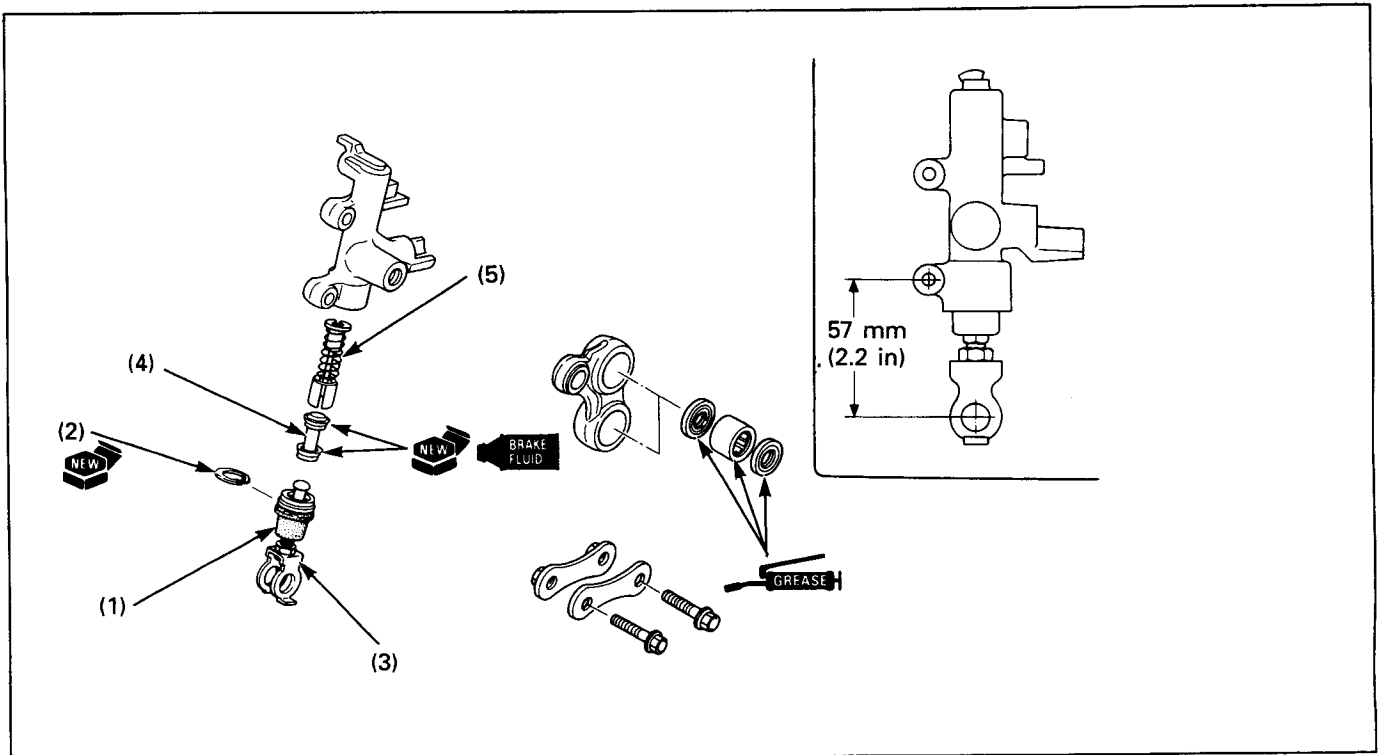

**NOTE**

- Replace the master piston, spring, cups, snap ring and boot as a set.
- The master piston, cups and spring must be installed as a set.

**Requisite Service**

- Secondary master cylinder removal/installation (page 13-21)

Procedure		Q'ty	Remarks
(1)	<b>Disassembly Order</b> Boot	1	Assembly is in the reverse order of disassembly.  <b>CAUTION</b> • Be certain the snap ring is fully seated in the groove. Removal/installation (page 13-23)  <b>CAUTION</b> • Do not disassemble the secondary master cylinder push rod or the correct brake performance is not obtained.
(2)	Snap ring	1	
(3)	Push rod assembly	1	
(4)	Master piston	1	
(5)	Spring assembly	1	