

Engine Starts, But Side Stand Switch Does Not Function At All

NOTE

The side stand switch should function follows:

- When the transmission is shifted into a gear from neutral with the side stand down, the ignition shuts off and the engine stops.
- When in neutral, the neutral switch line (a) of the ignition control module is connected to ground via the side stand switch. When the side stand is up, the side stand switch line (b) of the ignition control module passes to ground via the side stand switch. The ignition control module monitors lines (a) and (b), and provides spark only when one or both of those lines is connected to ground via the neutral switch or the side stand switch.

