

(Front Wheel/Suspension/Steering)	11-1
(Fuel System)	5-1
(Ignition System)	15-1
(Lights/Meters /Switches)	17-1
(Lubrication System).....	4-1
(Maintenance)	3-1
(Rear Wheel/Suspension)	12-1
Shock Link/Shock Absorber	
Removal/Installation	12-6
Shift Drum Removal/Installation	10-14
Side Cover	2-3
Side Stand Switch Removal/Installation	17-10
Specifications	1-4
Starter Motor Disassembly/Assembly	16-8
Removal/Installation.....	16-7
Steering Stem Removal/Installation.....	11-16
Suspension Linkage Disassembly/Assembly	12-7
Swingarm Disassembly/Assembly	12-10
Removal/Installation.....	12-9
System Air Bleeding	13-25
System Flow Pattern	6-2
System Inspection	15-6
System Location	
(Brake System)	13-2
(Charging System/Alternator).....	14-2
(Electric Starter)	16-2
(Ignition System)	15-2
(Lights/Meters/Switches)	17-2
Tachometer Inspection.....	17-10
Thermostat Removal/Installation	6-7
Tools	1-18
Torque Values	1-14
Transmission Removal/Installation	10-8
Troubleshooting	
(Brake System)	13-2
(Charging System/Alternator).....	14-3
(Clutch /Gearshift Linkage)	9-1
(Cooling System)	6-1
(Crankshaft/Transmission)	10-1
(Cylinder Head/Cylinder/Piston)	8-1
(Electric Starter)	16-3
(Frame/Body Panels/Exhaust System)	2-1
(Front Wheel/Suspension/Steering)	11-1
(Fuel System)	5-2
(Ignition System)	15-3
(Lubrication System).....	4-1
(Rear Wheel/Suspension)	12-1
Upper Fairing	2-7
Valve Clearance	3-5
Water Pump Removal/Installation	6-3
Wiring Diagrams	18-1
3-Piston Caliper	19-4