

## EMISSION CONTROL INFORMATION LABEL (U.S.A. ONLY)

An Emission Control Information Label is located on the storage compartment as shown.

