



FRAME/BODY PANELS/EXHAUST SYSTEM

Remove the middle cowl-to-inner middle cowl trim clips.

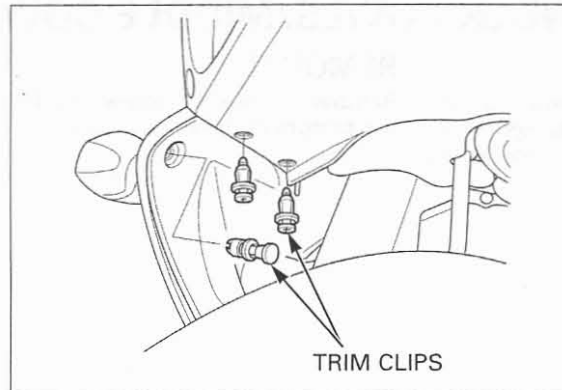

Remove the middle cowl-to-upper cowl pan screws. Remove the middle cowl-to-inner middle cowl special screws and middle cowl mounting special screw.

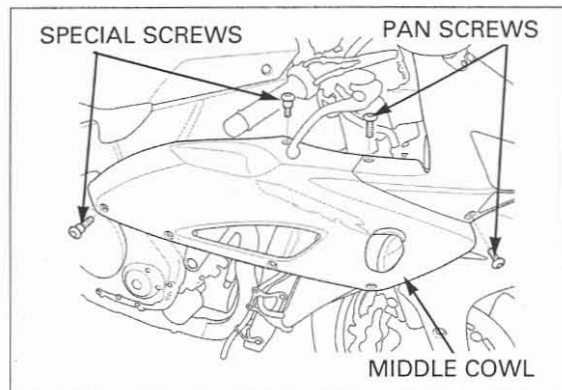

Remove the middle cowl while releasing the hooks on the upper cowl.
Disconnect the turn signal connector.

