

MAINTENANCE

Check the fuel lines for deterioration, damage or leakage. Replace the fuel line if necessary.
Check the fuel rails and fuel hose joints for damage or leakage. Replace them if necessary.
Check the fuel pump mounting area for leakage. Replace the fuel pump packing if necessary.
Check the primary/secondary injectors for damage or leakage. Replace them if necessary.



Remove the suitable support, then lower the fuel tank.


NOTE:

- Route the hoses, wires and harness properly (page 1-24).
- Be careful not to damage the harness and hoses.

After installing the fuel tank, make sure the drain, breather and fuel hoses are not kinked or bound.

RED LINE (BREATHER HOSE)

DRAIN HOSE

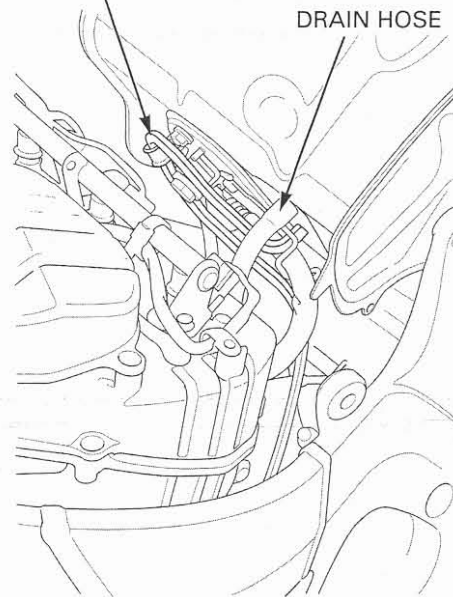

Connect the drain hose to the joint pipe.

