


BRAKE LIGHT SWITCH

The front brake light switch does not require adjustment.

Adjust the brake light switch so that the brake light comes on just prior to the brake actually being engaged. If the light fails to come on, adjust the switch so that the light comes on at the proper time. Hold the switch body and turn the adjuster. Do not turn the switch body.

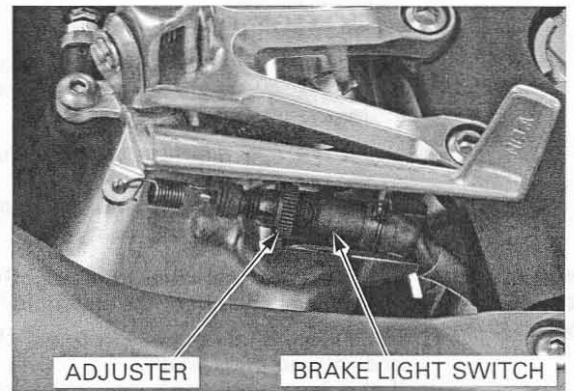


HEADLIGHT AIM

Place the motorcycle on a level surface.

Adjust the headlight aim as specified by local laws and regulations.


Adjust the headlight aim vertically by turning the vertical beam adjusting screw. A clockwise rotation moves the beam up and counterclockwise rotation moves the beam down.

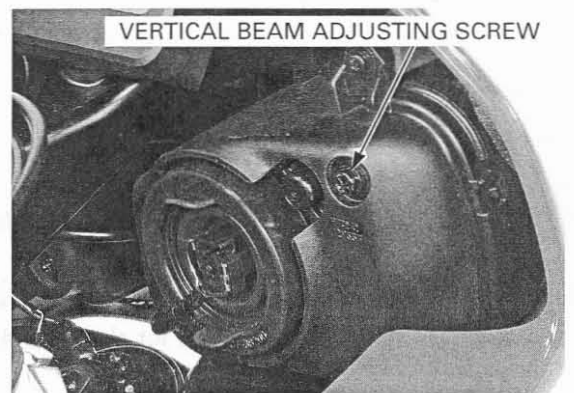

Adjust the headlight aim horizontally by turning the horizontal beam adjusting screw.

Left Headlight: A clockwise rotation moves the beam toward the right and counterclockwise rotation moves the beam toward the left side of the rider.

Right Headlight: A clockwise rotation moves the beam toward the left and counterclockwise rotation moves the beam toward the right side of the rider.

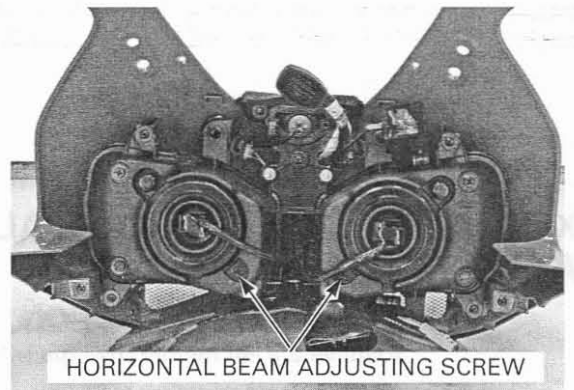

CLUTCH SYSTEM

CLUTCH LEVER ADJUSTMENT

The distance between the tip of the clutch lever and the grip can be adjusted by turning the adjuster.

