



## FUEL SYSTEM (Programmed Fuel Injection)

Install the fuel rail/secondary injector assembly onto the mounting bracket, being careful not to damage the seal ring.

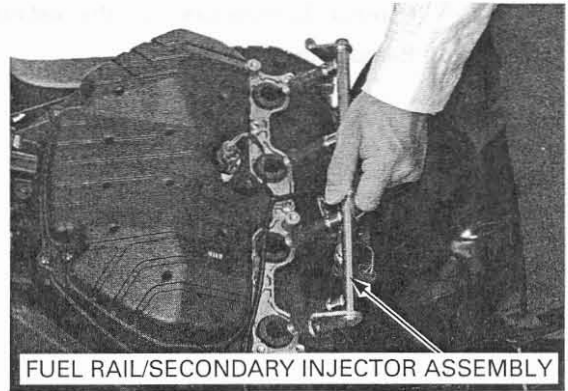

Tighten the fuel rail mounting bolts to the specified torque.

**TORQUE: 9.8 N·m (1.0 kgf·m, 7 lbf·ft)**

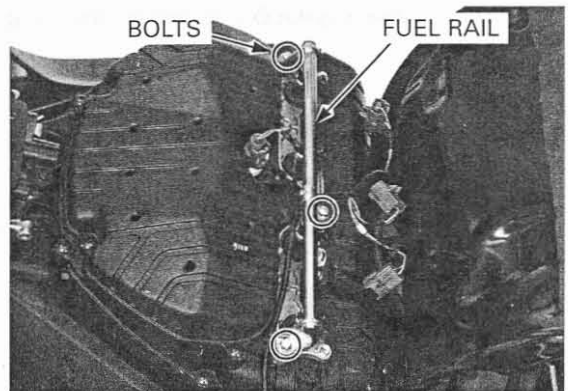


After inspection, install a new O-ring into the groove of the fuel joint hose.

*Be careful not to damage the O-ring while installing the fuel joint hose to the fuel rail.*

Install the fuel joint hose to the secondary injector fuel rail, tighten the two bolt to the specified torque.

**TORQUE: 9.8 N·m (1.0 kgf·m, 7 lbf·ft)**

Start the engine and check for leaks.

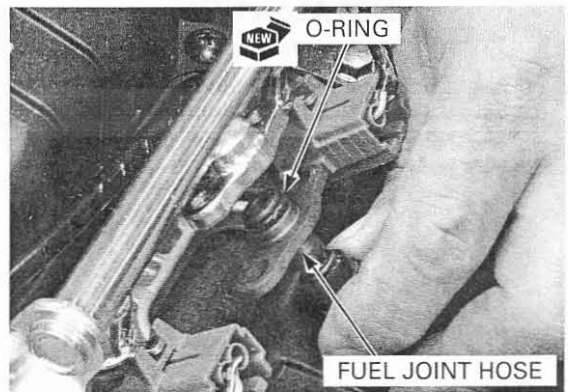

Connect the secondary injector connectors. Install and tighten the harness clamp screws. Secure the wire harness to the fuel rail using a wire band.

Install the removed parts in the reverse order of removal.

