



FUEL SYSTEM (Programmed Fuel Injection)


Remove the fuel feed hose sealing nut while holding the fuel rail.

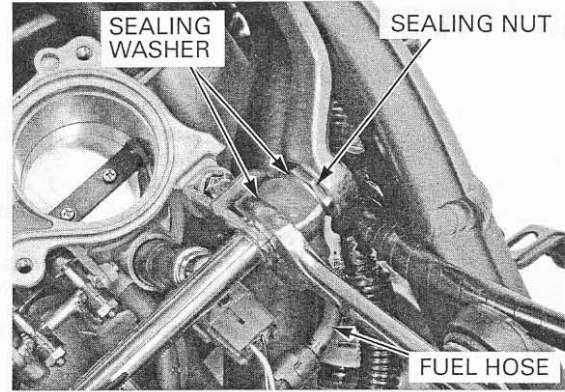

Loosen the hose clamp screws and disconnect the water hoses from the idle air control (IAC) thermal valve.

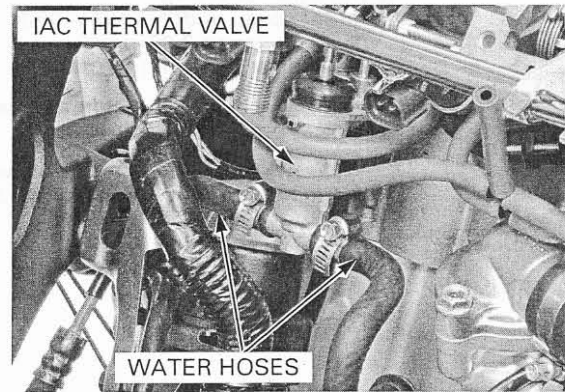

Loosen the lock nuts and disconnect the throttle cable ends from the throttle drum.

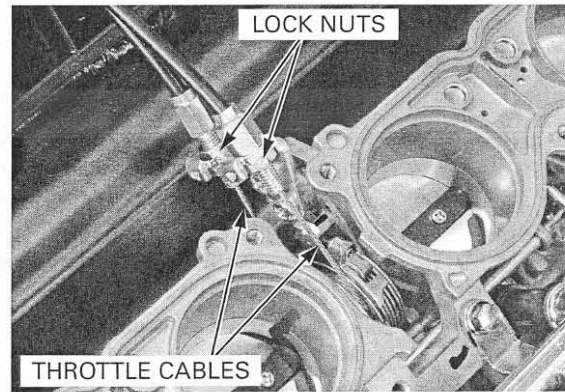

Remove the throttle stop screw knob from the clamp on the bypass hose.

