



FUEL SYSTEM (Programmed Fuel Injection)

Remove the plugs and connect the PAIR air suction hoses to the reed valve covers.

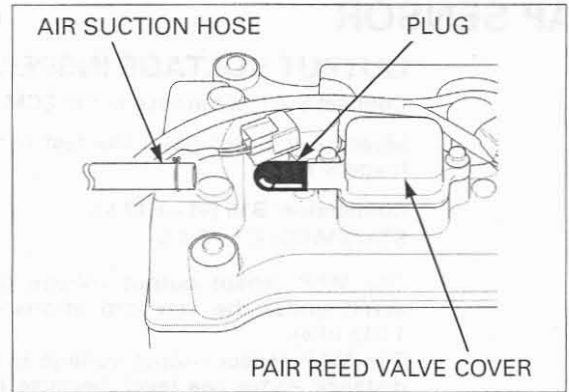

Adjust the idle speed if the idle speed differs from the specified speed.

IDLE SPEED: $1,200 \pm 100$ rpm

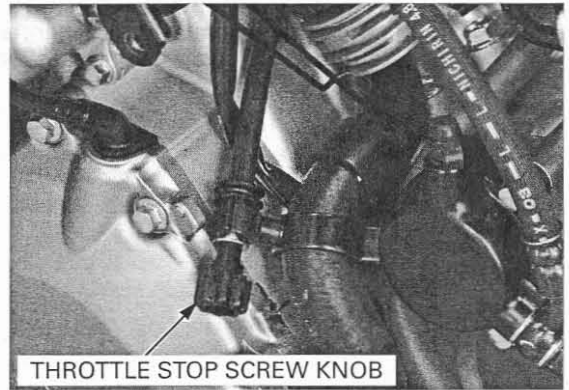

Remove the vacuum gauge from the vacuum hoses. Connect the each vacuum hoses to the 5-way joint.

Reset the ECM failure code (page 6-10).

