



## COOLING SYSTEM

### DISASSEMBLY


Unhook the hooks from the radiator bosses, then remove the radiator grill.

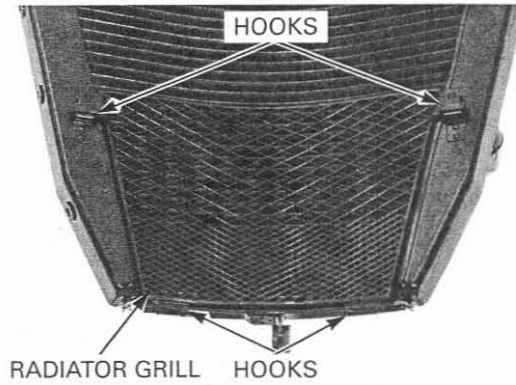

Remove the three bolts and cooling fan motor assembly from the radiator.

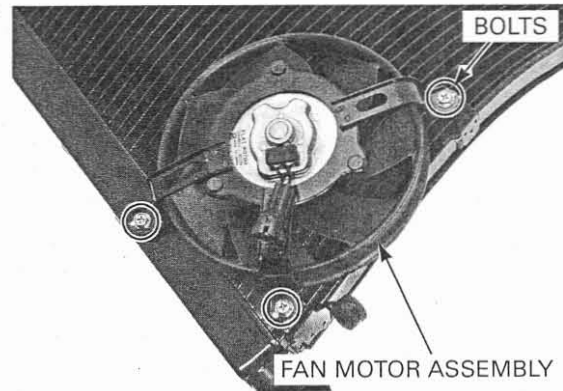

Remove the nut and cooling fan.

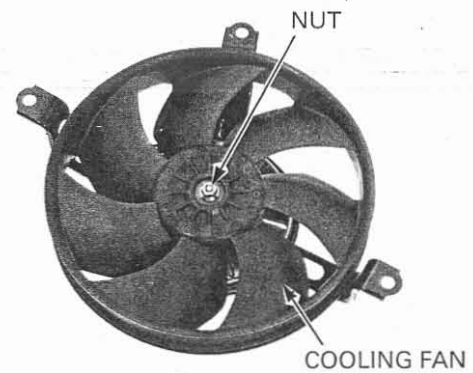

Release the fan motor connector from the fan motor bracket.

