




Remove the bolt and radiator lower stay from the oil pan.

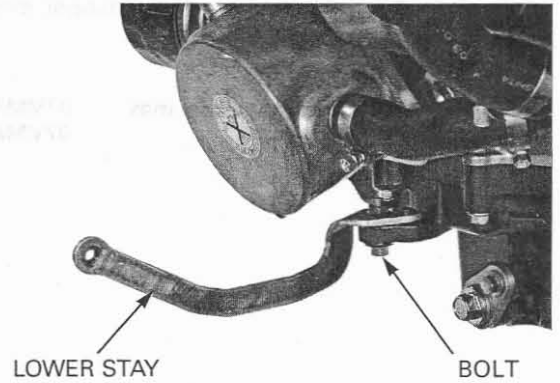

Support the engine using a jack or other adjustable support to ease of engine hanger bolts removal. Remove the left front engine hanger bolt and middle engine hanger bolt.

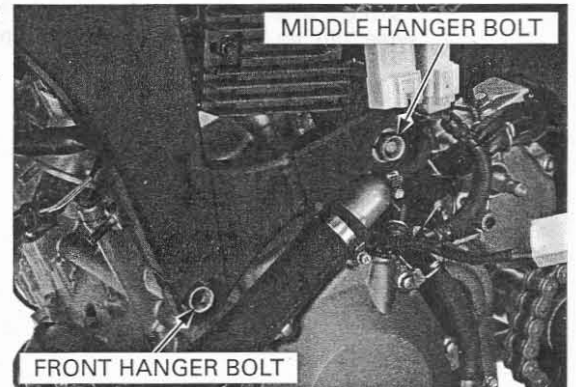

Remove the right front engine hanger bolt and middle engine hanger bolt and distance collars.

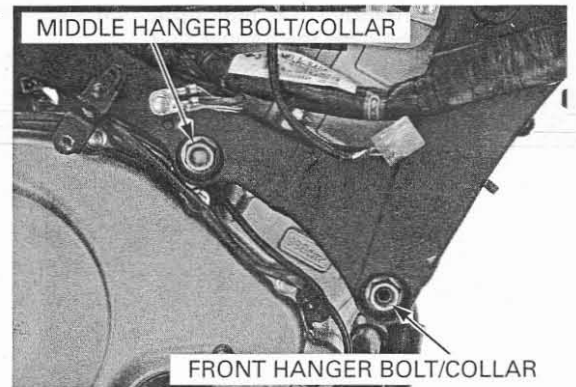

Remove the rear lower engine hanger nut while holding the hanger bolt.

