



Disconnect the ignition coil connectors and remove the direct ignition coils.

DIRECT IGNITION COILS

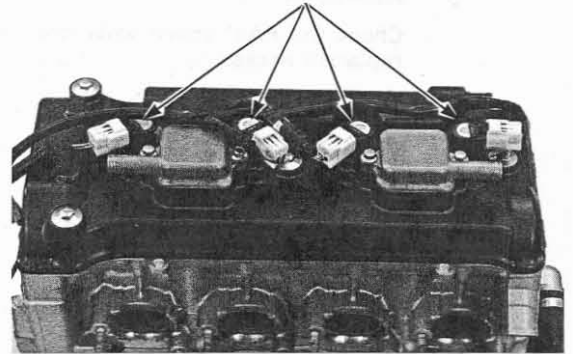

Remove the cylinder head cover bolts. Remove the cylinder head cover from the cylinder head.


CYLINDER HEAD COVER

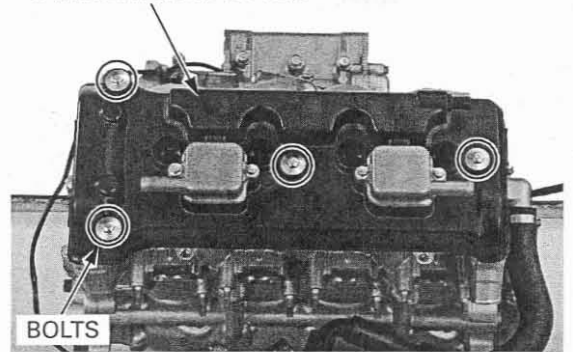

## CYLINDER HEAD COVER DISASSEMBLY

Remove the cylinder head cover packing.

PACKING

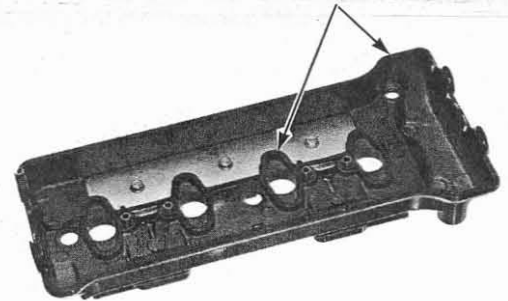

Remove the bolts and PAIR check valve cover.

PAIR CHECK VALVE COVERS

