



CYLINDER HEAD/VALVES

Remove the bolts and cam chain guide B.

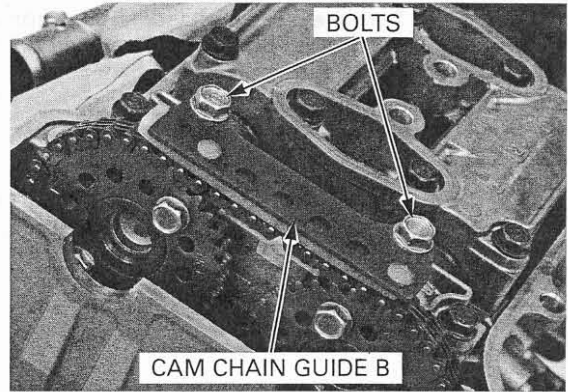


It is not necessary to remove the cam sprocket from the camshaft except when replacing the camshaft and/or cam sprocket. If you plan to replace the camshaft and/or cam sprocket, loosen the cam sprocket bolts as follows:

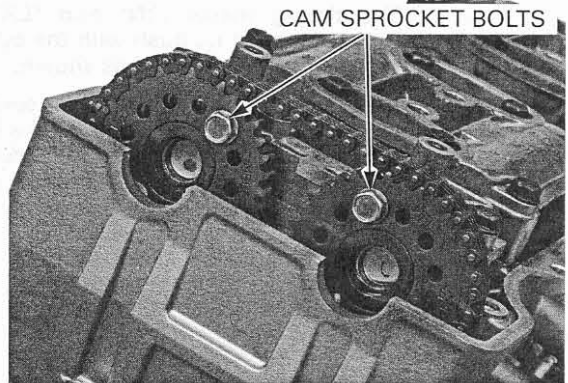

Be careful not to drop the cam sprocket bolts and cam sprocket into the crankcase.

- Remove the cam sprocket bolts from the intake and exhaust camshafts.

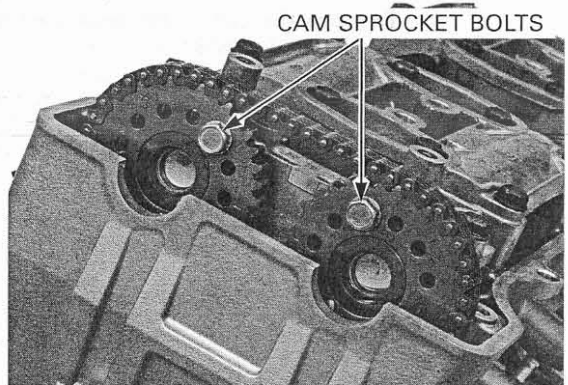

- Turn the crankshaft clockwise one full turn (360°), remove the other cam sprocket bolts from the camshafts.
- Remove the cam sprockets from the camshafts.

- Remove the bolts and CMP sensor rotor from the exhaust camshaft.

