

Install a new sealing washer and tighten the sealing bolt.

Recheck the valve timing.

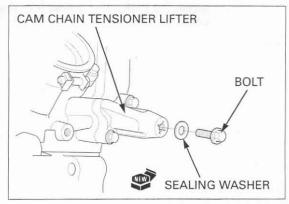


Apply oil to a new O-ring, and install it onto the CMP sensor. $\,$

Install the CMP sensor into the cylinder head.

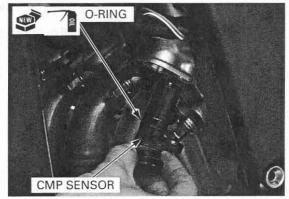


Install and tighten the mounting bolt securely. Connect the CMP sensor 2P (Black) connector. Install the cylinder head cover (page 9-32).

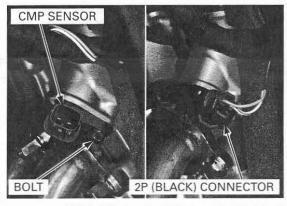

CYLINDER HEAD COVER ASSEMBLY

Install the PAIR check valve port plates into the cylinder head cover.

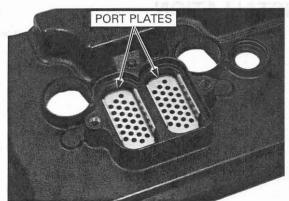

Contents Chapter 9 9-31