




Remove the screw and clutch switch.

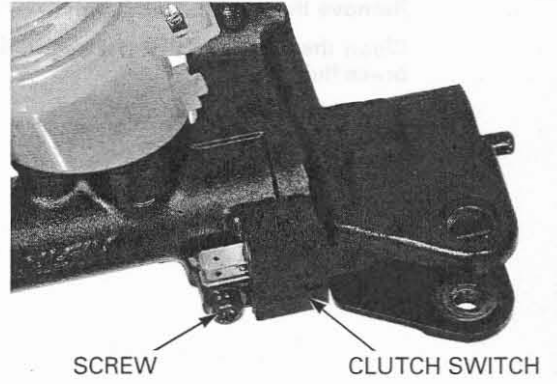

Remove the screw and oil cup and O-rings from the master cylinder body.

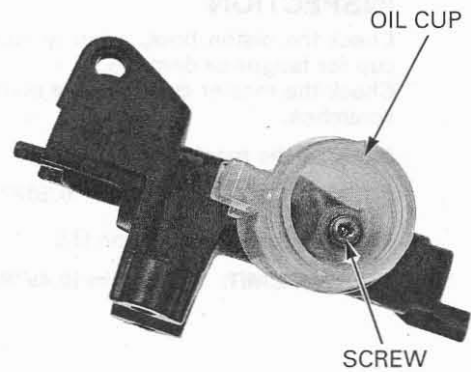

Remove the boot and push rod.

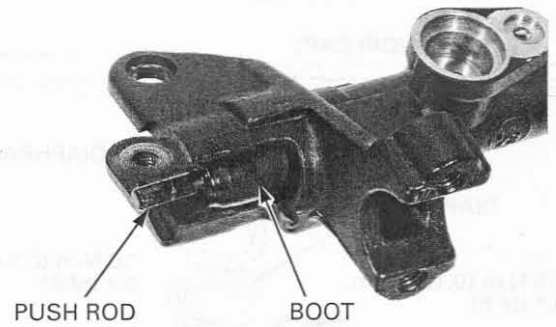

Remove the snap ring from the master cylinder body using the special tool as shown.

**TOOL:**  
Snap ring pliers 07914-SA50001

