


## CLUTCH/STARTER CLUTCH

---

### Clutch center

Check the grooves of the clutch center for damage or wear caused by the clutch plates. Replace it if necessary.

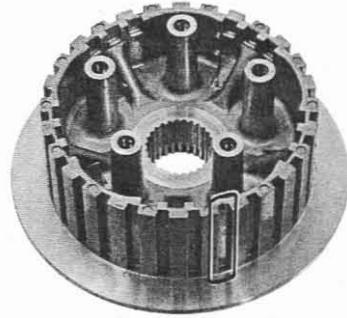

### Clutch lifter piece

Check the clutch lifter piece for damage or abnormal wear.



### Clutch lifter rod

Check the clutch rod for bend or other damage.



### Clutch disc

*Replace the clutch discs and plates as a set.*

Replace the clutch discs if they show signs of scoring or discoloration.

Measure the disc thickness of each disc.

#### SERVICE LIMIT:

A: 3.4 mm (0.13 in)

B: 2.9 mm (0.11 in)

