


## CLUTCH/STARTER CLUTCH

---

Check the starter driven gear for abnormal wear or damage.


Measure the starter driven gear boss O.D.

**SERVICE LIMIT: 45.642 mm (1.7969 in)**

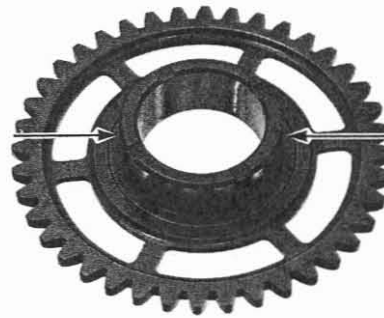

Check the starter reduction gear for wear or damage and replace it if necessary.

STARTER REDUCTION GEAR

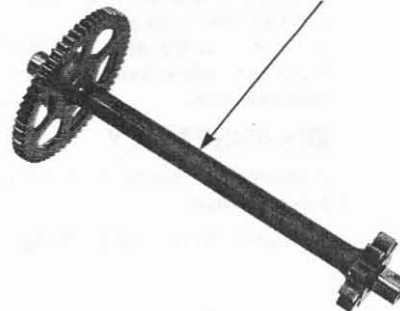

Check the starter idle gear and shaft for wear or damage, replace them if necessary.

**SERVICE LIMITS:**

Shaft O.D.: 9.98 mm (0.393 in)

Gear I.D.: 10.05 mm (0.396 in)

