



DISASSEMBLY

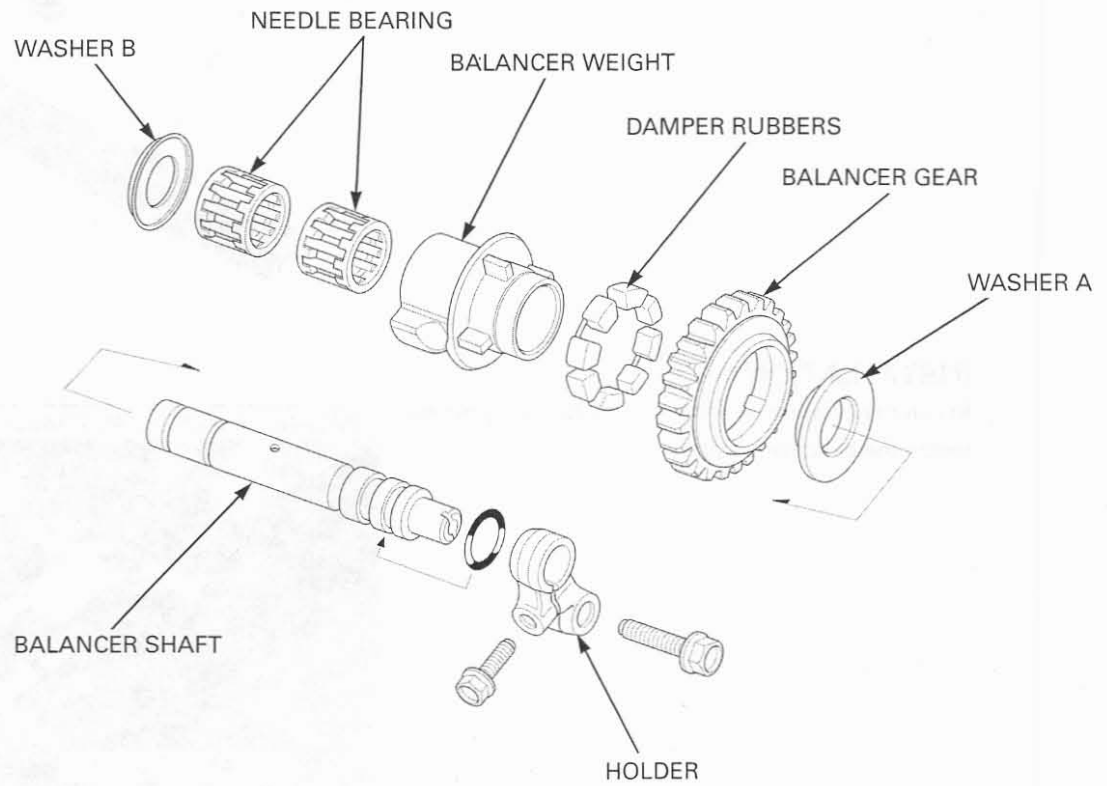

Install the damper rubbers into the balancer gear.  
Assemble the balancer gear and weight while aligning the aligning marks.

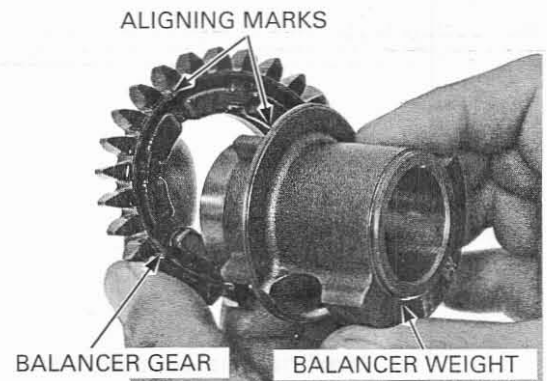

Apply oil to the needle bearing, install them into the balancer weight.  
Install the washer A and B.

