


FRONT WHEEL/SUSPENSION/STEERING

Tighten the new mounting screws to the specified torque.

TORQUE: 9.8 N·m (1.0 kgf·m, 7 lbf·ft)

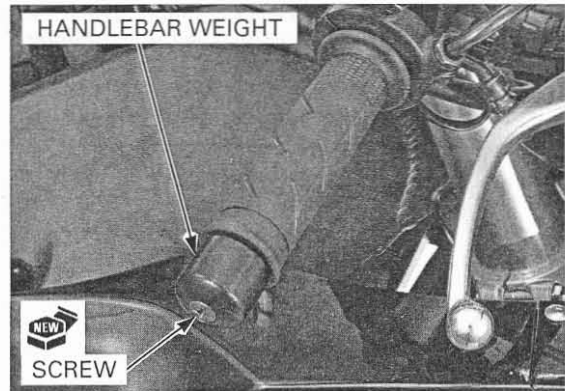

FRONT WHEEL


REMOVAL

Support the motorcycle securely using a hoist or equivalent, and raise the front wheel off the ground.


Remove the brake caliper mounting bolts and both brake calipers.

Do not operate the brake lever after the brake caliper is removed.

Support the brake caliper with a piece of wire so that it does not hang from the brake hose. Do not twist the brake hose.

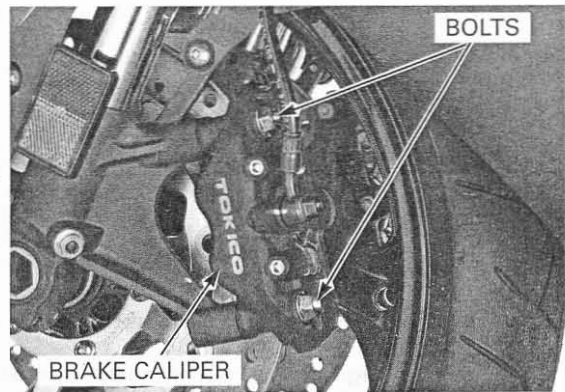

Loosen the right axle holder pinch bolts. Remove the axle bolt.

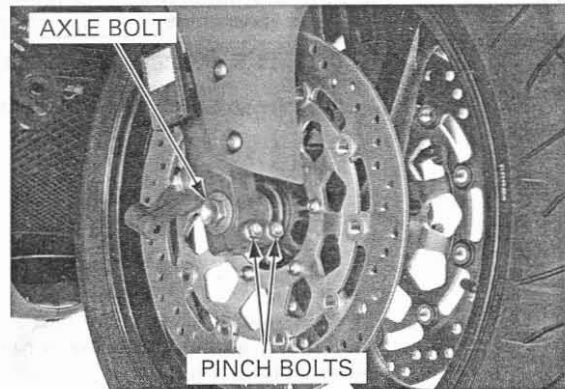

Loosen the left axle holder pinch bolts. Remove the axle and front wheel.

