


## FRONT WHEEL/SUSPENSION/STEERING


Remove the compression adjuster from the axle holder.

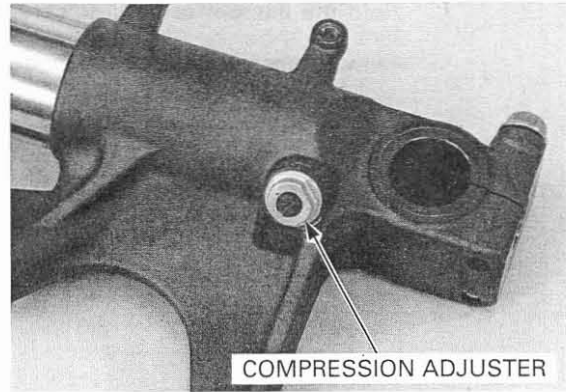


Hold the axle holder in a vise with soft jaws or a shop towel. Hold the fork damper with the fork damper holder, then remove the fork socket bolt and sealing washer.

**TOOL:**  
Fork damper holder

07YMB-MCF0101 or  
07YMB-MCFA100  
(U.S.A. only)

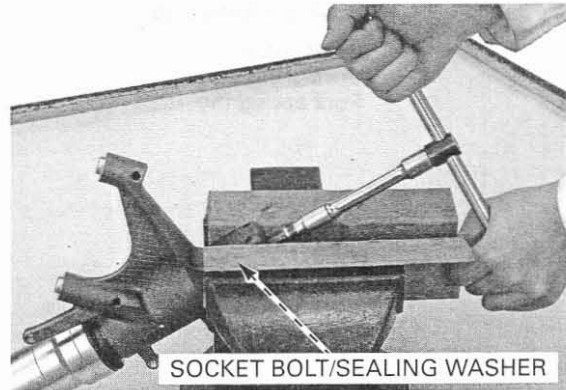

Remove the fork damper assembly from the fork slider.

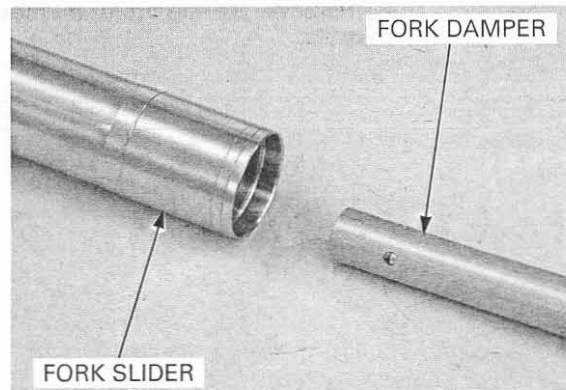

Remove the dust seal.

