



FRONT WHEEL/SUSPENSION/STEERING

Remove the bolt and front brake hose clamp.

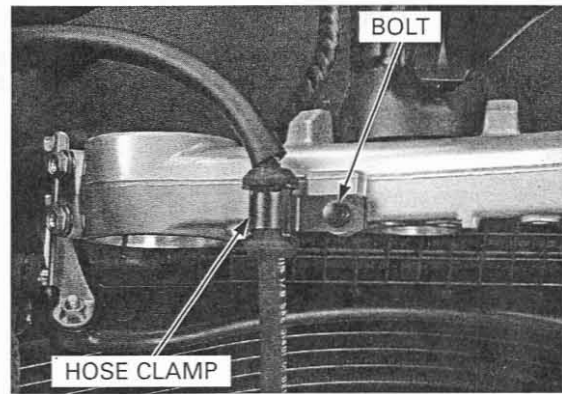

Straighten the tabs of the lock washer.
Remove the lock nut and lock washer.

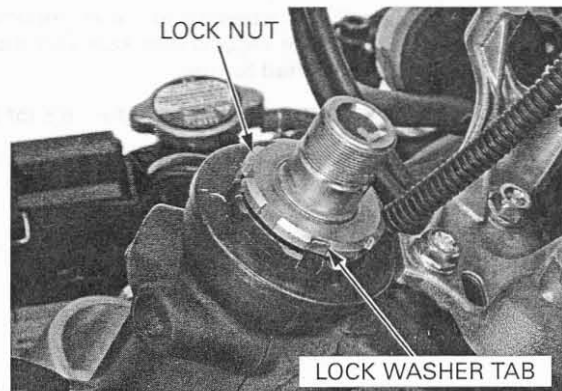


Remove the steering stem adjusting nut using the special tool.

TOOL:

Steering stem socket

07916-3710101 or
07916-3710100

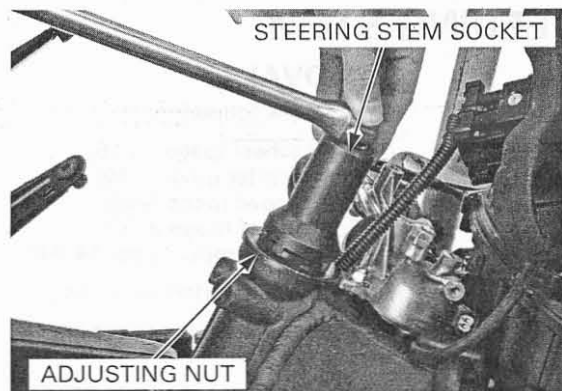

Remove the following:

- Dust seal
- Upper bearing inner race
- Upper bearing
- Steering stem
- Lower bearing

