

## REAR WHEEL/SUSPENSION

Drive the driven flange collar out of the driven flange bearings using the special tools.


**TOOLS:**

**Driver**

07749-0010000

**Pilot, 28 mm**

07746-0041100

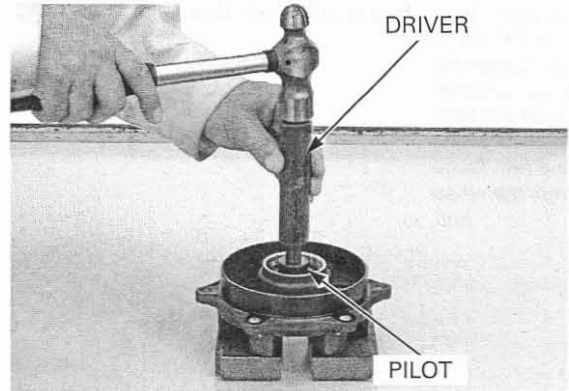

Drive out the driven flange bearings using the special tools.

**TOOLS:**

**Driver**


07749-0010000

**Attachment, 40 x 42 mm**

07746-0010900

**Pilot, 28 mm**

07746-0041100

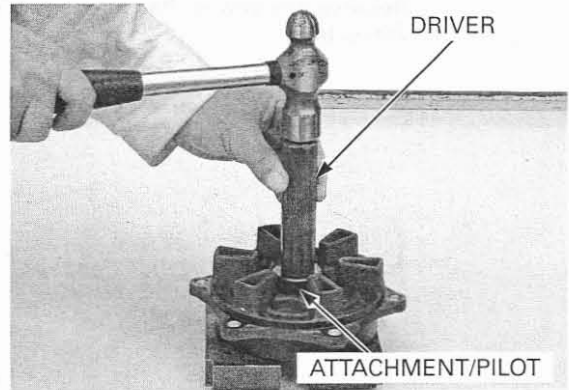

### Wheel bearing removal

Install the bearing remover head into the bearing. From the opposite side, install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.

**TOOLS:**

**Bearing remover head, 25 mm** 07746-0050800

**Bearing remover shaft** 07GGD-0010100

