


REAR WHEEL/SUSPENSION

Apply multi-purpose grease (Shell Alvania EP2 or equivalent) to the dust seal lips, pivot collar and needle bearings.
Install the pivot collar and dust seals to the shock link.

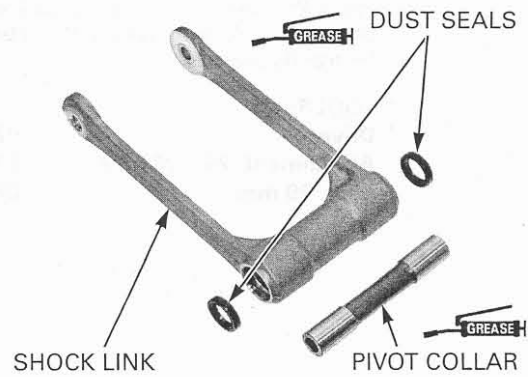


Loosely install the following:

- Shock arm
- Shock arm bolt/nut (swingarm side)
- Shock absorber lower mounting bolt/nut

Tighten the shock absorber lower mounting nut to the specified torque.

TORQUE: 44 N·m (4.5 kgf·m, 33 lbf·ft)

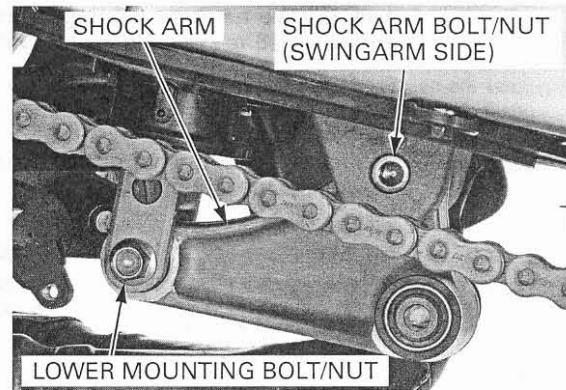


Install the following:

- Shock link
- Shock arm bolt/nut (shock link side)
- Shock link bolt/nut (frame side)

Tighten the nuts to the specified torque.

TORQUE:

- Shock link-to-frame pivot nut:**
44 N·m (4.5 kgf·m, 33 lbf·ft)
- Shock arm-to-shock link nut:**
44 N·m (4.5 kgf·m, 33 lbf·ft)
- Shock arm-to-swingarm nut:**
44 N·m (4.5 kgf·m, 33 lbf·ft)

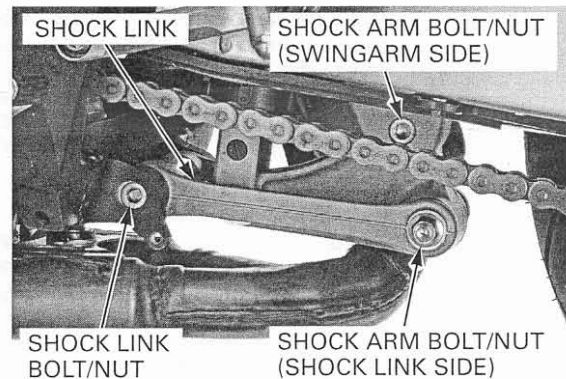

SWINGARM

REMOVAL

Remove the following:

- Rear wheel (page 15-7)
- Shock absorber (page 15-14)
- Suspension linkage (page 15-17)

Remove the bolt and rear brake hose guide from the swingarm.

