



HEADLIGHT RELAY

INSPECTION

- Remove the left middle cowl (page 3-7).
- Remove the relay box from the bracket.

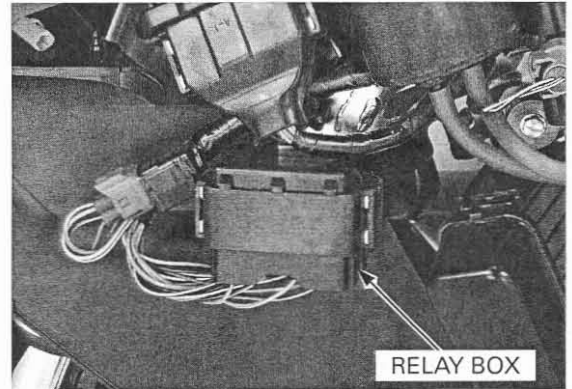

Remove the relay box (Blue) connector from the relay box, and then remove the headlight relay.

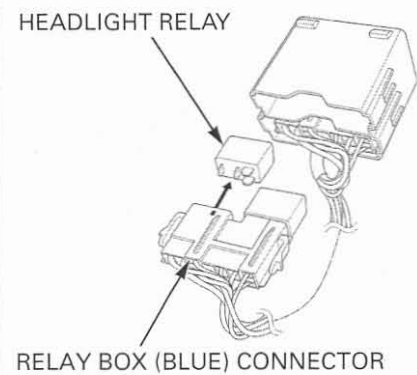

Connect an ohmmeter to the following headlight relay terminals.

CONNECTION: Black/red – Blue

Connect a 12 V battery to the following headlight relay terminals.

CONNECTION: White – Green

There should be continuity only when the 12 V battery is connected. If there is no continuity when the 12 V battery is connected, replace the headlight relay.

