

AIR CLEANER .....	4-8	DIODE .....	19-14
AIR CLEANER HOUSING .....	6-40	DRIVE CHAIN .....	4-26
ALTERNATOR CHARGING COIL .....	17-8	ECT SENSOR	
ALTERNATOR COVER INSTALLATION .....	11-7	FUEL SYSTEM (Programmed Fuel Injection) .....	6-65
ALTERNATOR COVER REMOVAL .....	11-4	LIGHTS/METERS/SWITCHES .....	20-14
BALANCER .....	13-28	EGCV (Exhaust Gas Control Valve)	
BANK ANGLE SENSOR .....	6-67	FUEL SYSTEM (Programmed Fuel Injection) .....	6-76
BATTERY .....	17-5	TECHNICAL FEATURES .....	2-6
BATTERY/CHARGING SYSTEM SPECIFICATIONS .....	1-10	EGCV SERVOMOTOR .....	6-78
BODY PANEL LOCATIONS .....	3-2	ELECTRIC STARTER SPECIFICATIONS .....	1-10
BRAKE FLUID .....	4-30	EMISSION CONTROL INFORMATION LABEL	
BRAKE FLUID REPLACEMENT/AIR BLEEDING .....	16-7	(U.S.A. ONLY) .....	1-39
BRAKE LIGHT SWITCH		EMISSION CONTROL SYSTEMS .....	1-36
LIGHTS/METERS/SWITCHES .....	20-20	ENGINE & FRAME TORQUE VALUES .....	1-12
MAINTENANCE .....	4-33	ENGINE CONTROL MODULE (ECM) .....	6-69
BRAKE PAD WEAR .....	4-31	ENGINE IDLE SPEED .....	4-24
BRAKE PAD/DISC .....	16-11	ENGINE INSTALLATION .....	8-9
BRAKE PEDAL .....	16-34	ENGINE OIL/OIL FILTER .....	4-21
BRAKE SYSTEM .....	4-32	ENGINE REMOVAL .....	8-4
CABLE & HARNESS ROUTING .....	1-24	ENGINE STOP RELAY .....	6-68
CAM CHAIN TENSIONER LIFTER .....	9-34	EOP (ENGINE OIL PRESSURE) SWITCH .....	20-15
CAMSHAFT INSTALLATION .....	9-26	EVAP PURGE CONTROL SOLENOID VALVE	
CAMSHAFT REMOVAL .....	9-8	(CALIFORNIA TYPE ONLY) .....	6-72
CHARGING SYSTEM INSPECTION .....	17-7	EVAPORATIVE EMISSION CONTROL SYSTEM	
CKP (CRANKSHAFT POSITION) SENSOR .....	18-7	(CALIFORNIA TYPE ONLY) .....	4-26
CLUTCH .....	10-16	EXHAUST GAS CONTROL VALVE CABLE .....	4-34
CLUTCH FLUID .....	4-34	EXHAUST PIPE/MUFFLER .....	3-30
CLUTCH FLUID DRAINING .....	10-6	FAN CONTROL RELAY .....	7-21
CLUTCH FLUID REPLACEMENT/AIR BLEEDING .....	10-6	FLYWHEEL .....	11-5
CLUTCH MASTER CYLINDER .....	10-8	FORK .....	14-21
CLUTCH SLAVE CYLINDER .....	10-13	FRONT BRAKE CALIPERS .....	16-27
CLUTCH SWITCH .....	20-21	FRONT FENDER .....	3-19
CLUTCH SYSTEM .....	4-33	FRONT MASTER CYLINDER .....	16-15
CLUTCH/STARTER CLUTCH SPECIFICATIONS .....	1-7	FRONT WHEEL .....	14-16
CMP SENSOR .....	6-66	FRONT WHEEL/SUSPENSION/STEERING	
COMBINATION METER .....	20-10	SPECIFICATIONS .....	1-9
COMPONENT LOCATION		FUEL CUT-OFF RELAY .....	6-35
ALTERNATOR .....	11-2	FUEL LINE .....	4-5
CLUTCH/STARTER CLUTCH/GEARSHIFT		FUEL LINE INSPECTION .....	6-31
LINKAGE .....	10-2	FUEL PUMP UNIT .....	6-33
CRANKCASE/CRANKSHAFT/BALANCER/		FUEL RESERVE SENSOR .....	20-17
PISTON/CYLINDER .....	13-2	FUEL SYSTEM (Programmed Fuel Injection)	
CYLINDER HEAD/VALVES .....	9-2	SPECIFICATIONS .....	1-6
ENGINE REMOVAL/INSTALLATION .....	8-2	FUEL TANK .....	6-36
FRONT WHEEL/SUSPENSION/STEERING .....	14-2	GEARSHIFT SPINDLE .....	12-7
FUEL SYSTEM (Programmed Fuel Injection) .....	6-2	GENERAL SPECIFICATIONS .....	1-4
HYDRAULIC BRAKE .....	16-2	HANDLEBAR SWITCHES .....	20-19
REAR WHEEL SUSPENSION .....	15-2	HANDLEBARS .....	14-9
TRANSMISSION/GEARSHIFT LINKAGE .....	12-2	HEADLIGHT .....	20-5
COOLANT REPLACEMENT .....	7-6	HEADLIGHT AIM .....	4-33
COOLING SYSTEM .....	4-24	HEADLIGHT RELAY .....	20-25
COOLING SYSTEM SPECIFICATIONS .....	1-6	HESD (Honda Electronic Steering Damper) .....	2-2
CRANKCASE ASSEMBLY .....	13-21	HESD (Honda Electronic Steering Damper)	
CRANKCASE SEPARATION .....	13-5	TROUBLESHOOTING .....	14-7
CRANKCASE/CRANKSHAFT/BALANCER/		HORN .....	20-24
PISTON/CYLINDER SPECIFICATIONS .....	1-8	HYDRAULIC BRAKE SPECIFICATIONS .....	1-10
CRANKPIN BEARING .....	13-12	IAC VALVE SYNCHRONIZATION .....	6-61
CRANKSHAFT .....	13-7	IAT SENSOR .....	6-65
CYLINDER COMPRESSION TEST .....	9-6	IDLE AIR CONTROL (IAC) THERMAL VALVE .....	6-56
CYLINDER HEAD ASSEMBLY .....	9-22	IDLE AIR CONTROL (IAC) VALVE .....	6-57
CYLINDER HEAD COVER ASSEMBLY .....	9-31	IGNITION SWITCH .....	20-18
CYLINDER HEAD COVER DISASSEMBLY .....	9-7	IGNITION SYSTEM INSPECTION .....	18-5
CYLINDER HEAD COVER INSTALLATION .....	9-32	IGNITION SYSTEM SPECIFICATIONS .....	1-10
CYLINDER HEAD COVER REMOVAL .....	9-6	IGNITION TIMING .....	18-7
CYLINDER HEAD DISASSEMBLY .....	9-14	INTAKE AIR DUCT .....	6-73
CYLINDER HEAD INSPECTION .....	9-16	LICENSE LIGHT .....	20-9
CYLINDER HEAD INSTALLATION .....	9-24	LIGHTS/METERS/SWITCHES SPECIFICATIONS .....	1-11
CYLINDER HEAD REMOVAL .....	9-13	LUBRICATION & SEAL POINTS .....	1-20
CYLINDER HEAD/VALVES SPECIFICATIONS .....	1-7	LUBRICATION SYSTEM DIAGRAM .....	5-2