


Remove the exhaust pipe joint nuts.



Remove the following:

- Exhaust pipe mounting bolt/cap nut
- Washer
- Collar
- Exhaust pipe
- Exhaust pipe gaskets

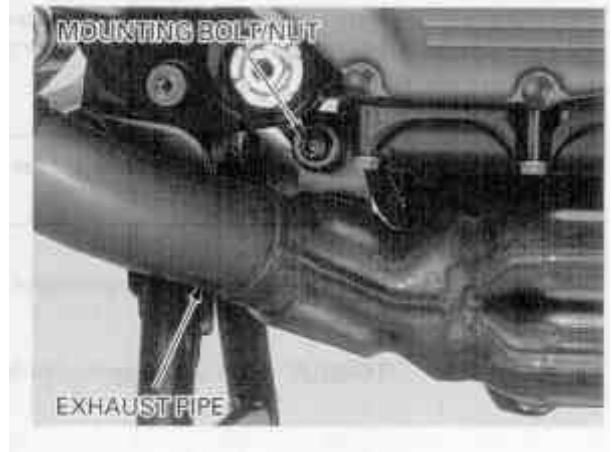

INSTALLATION

