

# THROTTLE BODY

## REMOVAL

### ▲WARNING

- Gasoline is extremely flammable and is explosive under certain conditions.
- Be sure to relieve fuel pressure while the engine is OFF.

### CAUTION:

- Bending or twisting the control cables will impair smooth operation and could cause the cables to stick or bind, resulting in loss of vehicle control.
- Before disconnecting the fuel tube, release the fuel pressure by loosening the service check bolt.
- Always replace the sealing washer when the service check bolt is removed or loosened.



*Do not snap the throttle valve from full open to full close after the throttle cable has been removed. It may cause incorrect idle operation.*


Remove the following:

- Fuel tank (page 5-52)
- Air cleaner housing (page 5-56)

Remove the throttle stop screw from the guide.

Remove the throttle cable guide bracket mounting bolts.

Disconnect the throttle cable ends from the throttle drum.

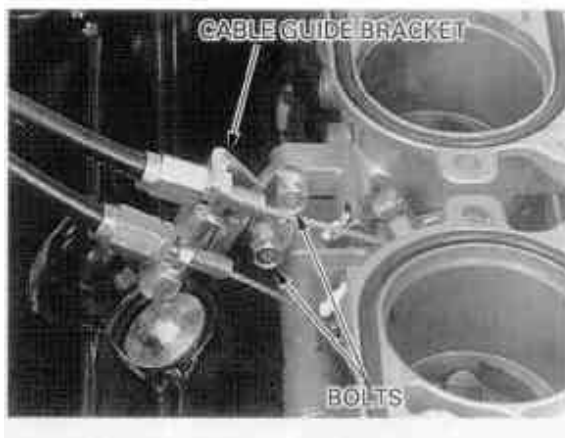

Disconnect the No. 1/3 ignition coil primary wires.

Disconnect the TP sensor connector.

