


ENGINE REMOVAL/INSTALLATION

Hold the rear/lower engine hanger adjusting bolt and tighten the adjusting bolt lock nut to the specified torque using the special tool.

TOOL:

Lock nut wrench 07VMA-MAT0100

TORQUE: 54 N·m (5.5 kgf·m , 40 lbf·ft)

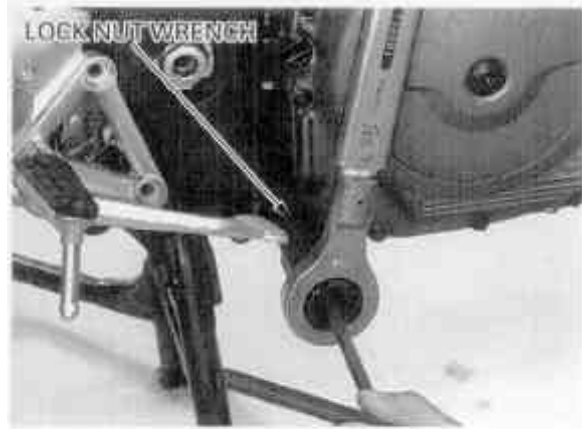


Hold the rear/upper engine hanger adjusting bolt and tighten the adjusting bolt lock nut to the specified torque using the special tool.

TOOL:


Lock nut wrench 07VMA-MAT0100

TORQUE: 54 N·m (5.5 kgf·m , 40 lbf·ft)

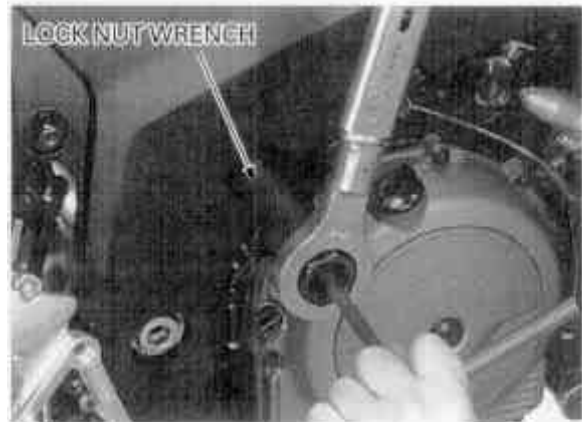

Install the rear/lower and rear/upper engine hanger nuts to the specified torque.

TORQUE: 64 N·m (6.5 kgf·m , 47 lbf·ft)

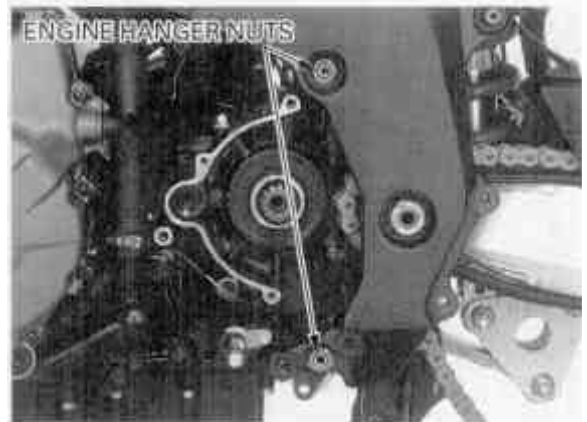

Tighten front/right and front/left engine hanger bolts to the specified torque.

TORQUE: 40 N·m (4.1 kgf·m , 30 lbf·ft)

