

While pushing in, turn the bulbs counterclockwise to remove it and replace with new ones.

Install the bulb sockets in the reverse order of removal.




REMOVAL/INSTALLATION

Remove the seat (page 2-2).

Disconnect the tail/brake light sockets.
Remove the bolts and tail/brake light unit.

Installation is in the reverse order of removal.

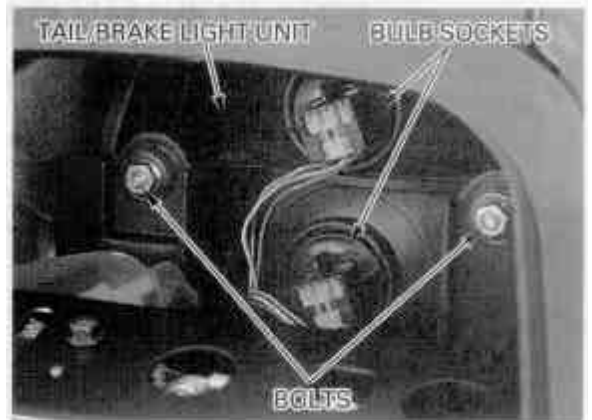


COMBINATION METER

BULB REPLACEMENT

Remove the windscreen (page 2-8).

Pull the indicator lamp socket out of the combination meter.

Remove the bulb from the socket and replace it with a new one.

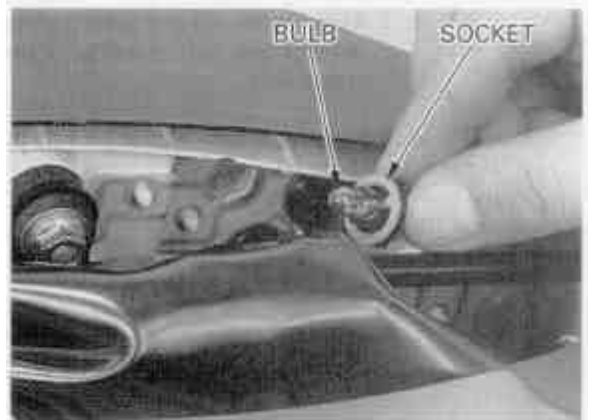

REMOVAL

Remove the upper cowl (page 2-8).

Disconnect the combination meter multi-connectors.

Disconnect the immobilizer 2P (Black) connector.

