

Synchronization Adjusting Screw  
(Carburetor synchronization page 3-9)  
• Fuel tank

Throttle Stop Screw (Idle speed)  
• Left side cover

Carburetor Choke (operation)

Clutch Lever (Free play)

Suspension  
(Loose, wear, damage)  
• Rear fender B

Steering Head  
Bearings (Damage)

Valve Clearance  
(page 3-5)

Suspension  
(Loose, wear, damage)

Radiator Hose  
(Leakage, deterioration, damage)  
• Side fairings

Spark Plug (Wear, damage,  
coloration)  
• Maintenance lids

Engine Oil Drain Bolt  
(Oil replacement)  
• Left side fairing

Drive Chain  
(Free play, lubrication,  
replacement)

Side Stand (Operation)

