

Requisite Service

- Swingarm removal/installation (page 13-7)

Procedure		Q'ty	Remarks
Disassembly Order			
(1)	Right pivot collar	1	
(2)	Dust seal(22×35×7)	1	
(3)	Snap ring	1	
(4)	Right pivot bearing(6202)	2	Refer to page 13-14 for removal.
(5)	Distance collar	1	
(6)	Drive chain slider	1	
(7)	Left pivot collar	1	
(8)	Dust seal(22×31×5)	1	
(9)	Left pivot bearing	1	Refer to page 13-14 for removal.
Assembly Order			
(9)	Left pivot bearing	1	Refer to page 13-14 for installation.
(8)	Dust seal(22×31×5)	1	
(7)	Left pivot collar	1	
(6)	Drive chain slider	1	Align the slit in the chain slider with the tab on the swingarm.
(5)	Distance collar	1	
(4)	Right pivot bearing(6202)	2	Refer to page 13-14 for installation.
(3)	Snap ring	1	Install the snap ring with the chamfered side facing in.
(2)	Dust seal(22×35×7)	1	
(1)	Right pivot collar	1	