

CENTERSTAND

REMOVAL/INSTALLATION

Retract the centerstand and support the scooter securely.

Remove the cotter pin and washer.

Remove the following:

- Springs
- Pivot shaft
- Centerstand

Installation is in the reverse order of removal.

- Apply grease to the pivot areas.
- Always replace the cotter pin with new one.

NOTE:

The centerstand could become noisy when retracted if the pivot area lacks proper lubrication.

