

## FUEL LINE


Remove the floor panel (page 3-11).

Check the fuel hose for deterioration, damage or leakage.

Replace the fuel hose if necessary (page 6-32).

Also, check the fuel feed fittings for leakage.

Install the removed parts in the reverse order of removal.

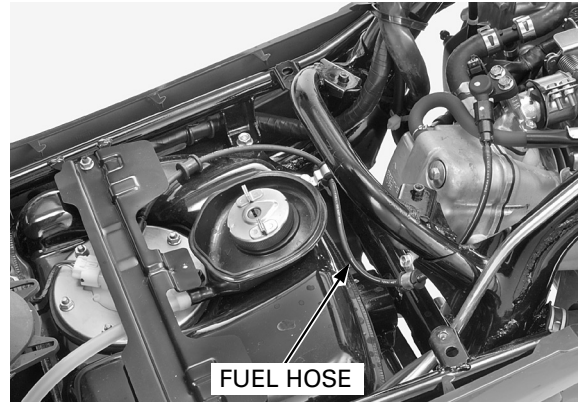

## THROTTLE OPERATION


*Reusing an abnormally bent or kinked throttle cable can prevent proper throttle slide operation.*

Check for any deterioration or damage to the throttle cable. Check the throttle grip for smooth operation. Check that the throttle opens and automatically closes in all steering positions.


If the throttle grip does not return properly, lubricate the throttle cable.

For cable lubrication, disconnect the throttle cable at their pivot points and apply commercially available cable lubricant or light weight oil.

If the throttle grip still does not return properly, replace the throttle cable.

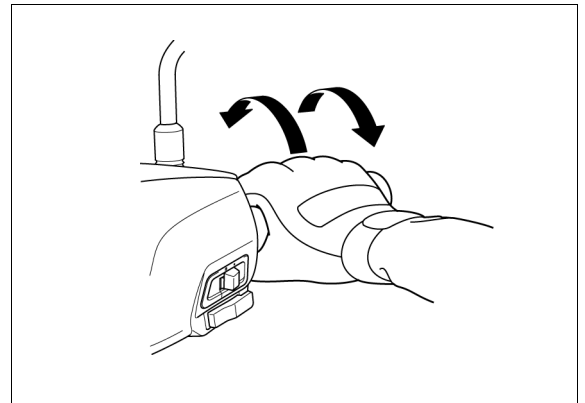

With the engine idling, turn the handlebar all the way to the right and left to ensure that the idle speed does not change. If idle speed increases, check the throttle grip freeplay and throttle cable connection.

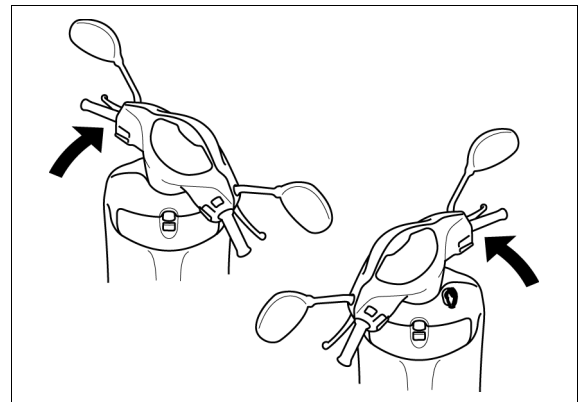

Measure the throttle grip freeplay at the throttle grip flange.

**FREEPLAY: 2 – 6 mm (0.08 – 0.24 in)**

