


MAINTENANCE

SPARK PLUG

Open the fuel lid.


Remove the screw and spark plug maintenance lid.

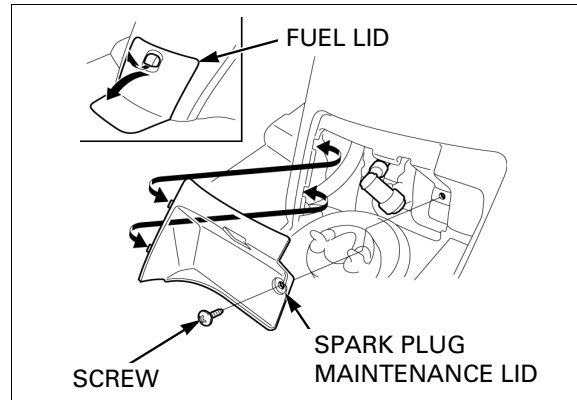

Clean around the spark plug base with compressed air before removing the plug, and be sure that no debris is allowed to enter into the combustion chamber.

Disconnect the spark plug cap and clean around the spark plug base.

Remove the spark plug.

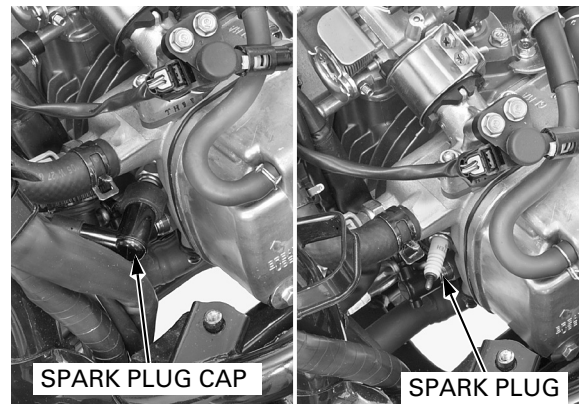

Inspect or replace as described in the maintenance schedule (page 4-4).

Check the following and replace if necessary.

- Insulator for damage
- Electrodes for wear
- Burning condition, coloration;
 - Dark to light brown indicates good condition.
 - Excessive lightness indicates malfunctioning ignition system or lean mixture.
 - Wet or black sooty deposit indicates over-rich mixture.

If the electrode is contaminated with carbon deposits, clean the electrode using a spark plug cleaner.

Always use the specified spark plug on this scooter.

SPECIFIED SPARK PLUG:

Standard:

CR7EH-9 (NGK), U22FER9 (DENSO)

For extended high speed riding:

CR8EH-9 (NGK), U24FER9 (DENSO)

