


BRAKE SYSTEM

FRONT DISC BRAKE

Firmly apply the brake lever and check that no air has entered the system.

If the lever feels soft or spongy when operated, bleed the air from the system.


Refer to air bleeding procedures (page 17-5).

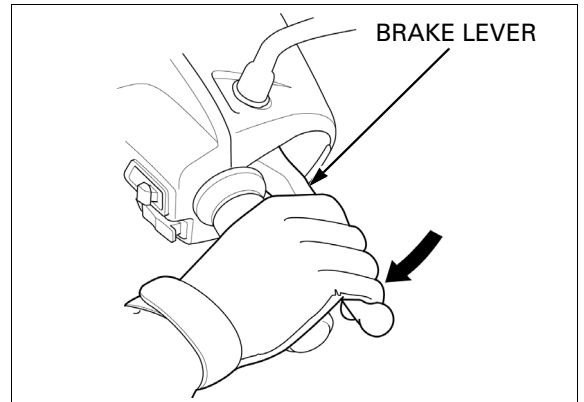

Inspect the brake hose and fittings for deterioration, cracks, or signs of leakage.

Tighten any loose fittings.

Replace hose and fittings as required.

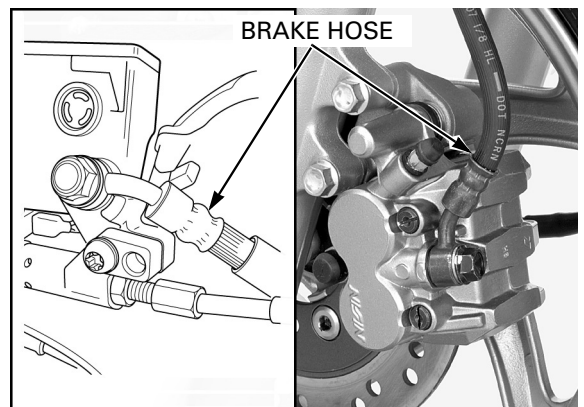


REAR DRUM BRAKE

Check the brake cable and brake lever for loose connections, excessive play or other damage. Replace or repair if necessary.

Measure the rear brake lever freeplay at the end of the lever.

FREEPLAY: 10 – 20 mm (0.4 – 0.8 in)

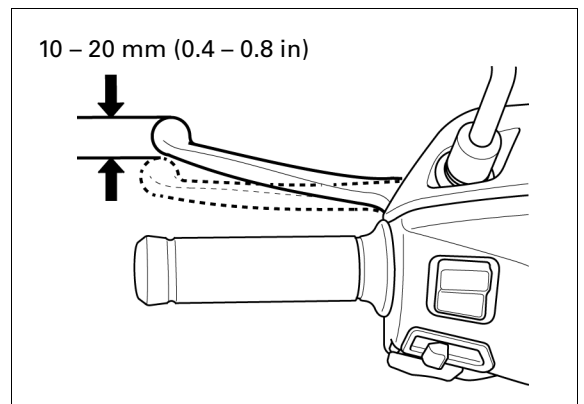

Adjust the rear brake lever freeplay by turning the rear brake arm adjusting nut.

