


MAINTENANCE

Adjust the rear brake lever freeplay by turning the rear brake arm adjusting nut.

After adjustment, make sure the following:

- Push the brake arm to confirm that there is a gap between the adjusting nut and the joint pin.
- The cutout on the adjusting nut is seated on the joint pin.

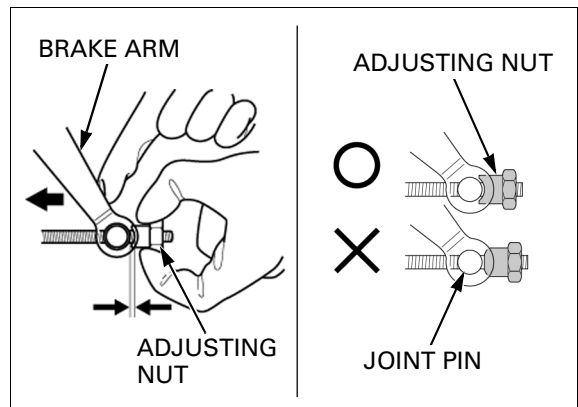


COMBINED BRAKE SYSTEM INSPECTION

- This model is equipped with combined brake system.
- Before inspection, check the front brake fluid (page 4-16).

Lift the rear wheel off the ground and apply the rear brake lever.

Make sure that the rear wheel does not rotate while the rear brake lever is applied.

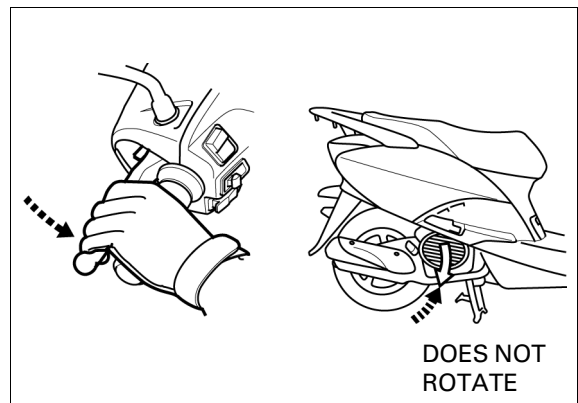

Lift the front wheel off the ground and rotate it by hand.

Make sure that the front wheel rotates smoothly.

Lift the front wheel off the ground and apply the rear brake lever.

Make sure that the front wheel does not rotate while the rear brake lever is applied.

If it is abnormal, inspect as follows:

