

LUBRICATION SYSTEM

Install and tighten the oil pump mounting bolts to the specified torque.

TORQUE: 10 N·m (1.0 kgf·m, 7 lbf·ft)

Install the stator base/water pump (page 7-19).

